


Diagnosing malfunction - No air is discharged

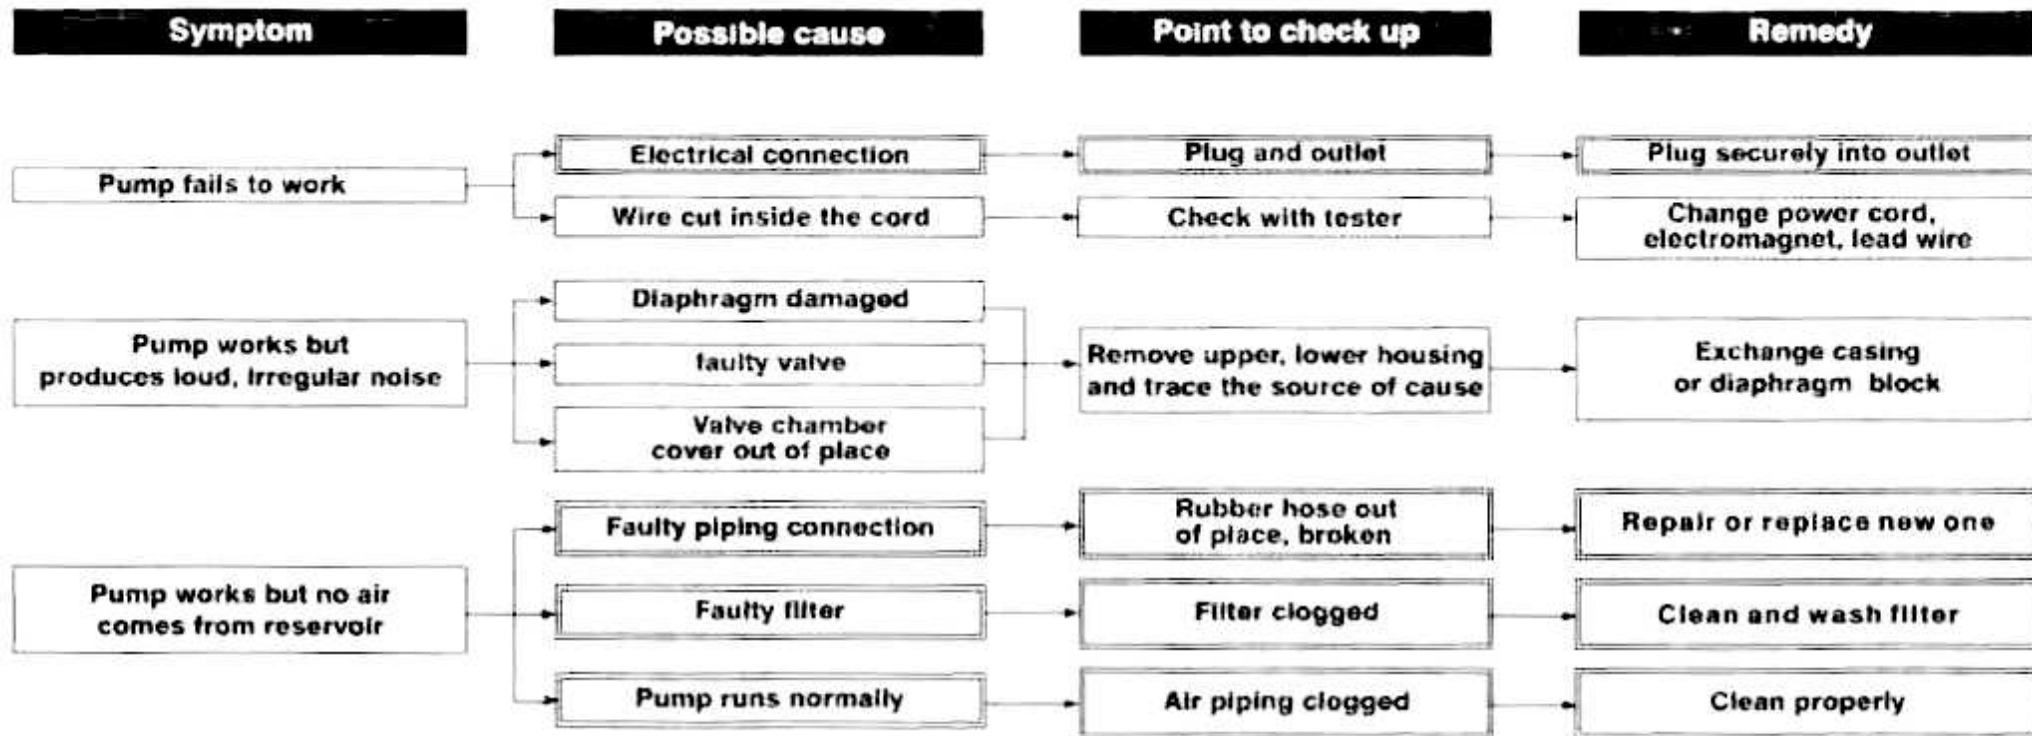

Caution:

- 1) Double bracketed items can be repaired by customer. For other troubles, return pump to nearest repair depot for repairs by manufacturer.
- 2) Change diaphragms once a year.
- 3) During operation, do not touch the lower housing with bare hands as the temperature will become about 70°C. (This temperature will not affect the performance of the pump.)

DISTRIBUTED BY



MATALA WATER TECHNOLOGY CO., LTD.

www.matala.com.tw