

Pond And Garden Protector Instructions

The Pond & Garden Protector can be assembled in an open area away from the water garden. Once assembled, one person can easily lift the Pond & Garden Protector to place it in its final location.

1. Spread the Nylon Base out on the ground in the shape of a rectangle. Make sure that the base lays flat and that the sides are not twisted. (Fig.1)

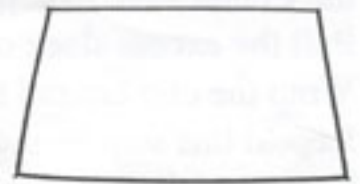


Fig.1

2. Assemble the fiberglass poles by inserting the male end of one pole into the metal connector of the next. The individual sections of each fiberglass pole are strung together with an elastic cord. This cord holds the sections together once assembled. (Fig. 2)



Fig.2

3. Place the Center Pole Receptor in the center of the Nylon Base. Insert the male ends of the four poles into each of the four holes in the Pole Receptor. (Fig.3a) The poles should be pointed toward the four corners of the nylon base. If they do not point toward the corners, rotate the Pole Receptor 90 degrees. (Fig.3b)



Fig.3a



Fig.3b

4. Starting at one corner, insert the end of the pole (with the rubber cap) into the pocket that is sewn into the Nylon Base. Repeat this step for the other three poles. When making the connection at the last corner, lift the pole up as you insert it into the pocket. This will force the center of the structure up to create the dome shape. (Fig.4)



Fig.4

5. Connect one Tie Down to each of the four fiberglass poles. The Tie Downs should be attached above the second metal connector on each pole. Hold both ends of one Tie Down in one hand and find the center with the other hand. Wrap the rope around the pole and insert the ends through the loop, forming a slip knot. (Fig.5a) Pull the knot tight. (Fig.5b) Repeat this step for the other three poles (Remember: Tie Downs should be attached above the second metal connector on each pole. Attaching the Tie Down above the connector will keep the knot from sliding down the pole.)



Fig.5a



Fig.5b

6. Cover the structure with the net. (Fig.6)

7. Next install two net clips on each pole. Clips should be evenly spaced, two per pole. Begin by installing one clip closest to the Center Pole Receptor under the first metal connector. Pull the excess slack out of the net before you attach the clip. Wrap the clip around the pole and squeeze the clip to fasten. Repeat this step by securing the second clip on the pole at the bottom of the lower metal connector. Securing the clips on the bottoms of the metal connectors keep them from sliding up.

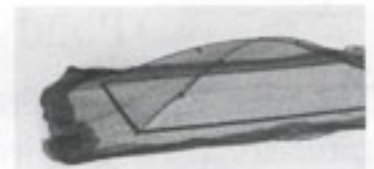


Fig.6

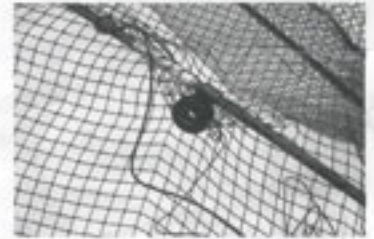


Fig.7

8. Place the structure over the water garden.

9. Secure the structure in place using the Tie Downs and the four large tent stakes. Working from a short side of the rectangular base, pull one of the Tie Downs from the pole on the left and one from the pole on the right, towards the ground in the middle of the two poles. Drive a tent stake into the ground, pull the excess slack out of the Tie Downs and attach the Tie Down to the tent stake. Move to the opposite side and repeat. Once the two ends have been secured, the two remaining sides should be secured in the same fashion.



Fig.9

10. After the Tie Downs have been installed, secure the net using twelve net stakes. Pull the net tight and push the stakes through the holes in the net as shown and into the soil.



Fig.10

** The Atlantic Pond & Garden Protector is intended to keep leaves and debris off of the pond and was not designed for heavy snow loads.



 **Atlantic**TM

4494 Orchard Street, Mantua, Ohio 44255

Phone 330-274-8317 • Fax 330-274-8790

info@atlanticwatergardens.com • www.atlanticwatergardens.com