



ENDURANCE SERIES



504.837.5575

1.800.939.3659

info@astfilters.com

www.ASTfilters.com

Table of Contents

Introduction to the AST Endurance	2
Endurance Sizing Charts	4
Endurance Backwash Operation: Standard Configuration	5
Normal Filtration	6
Early Backwash	7
Late Backwash	8
End Backwash	9
Periodically Drain Sludge	10
Plumbing Configurations	11
Standard Pond Configuration with UV sterilizer: Water Pumped	11
Airlift Configuration	12
Installation	17
Sludge Removal Options	19
Raised Bucket Drain: Manual Operation	19
Pneumatic Sludge Discharge	20
Pneumatic Sludge Discharge for Water Pumped Systems	22
Water Pumped Units: Recommended Air and Water Pump Pairings	23
Endurance 2000 Endurance 4000	23
Airlifted Units: Recommended Air Pumps	24
Backwash Frequency	25
Replacement Parts	26
Troubleshooting Your Endurance Filter	27
Elevated Nitrite (NO ₂) Levels	27
Low Effluent Dissolved Oxygen	27
Pressure Loss/Reduced Flowrate	28
Acclimating your Filter	28
Appendix A: The Science behind Bioclarification	31
Clarification	31
Biofiltration	32
LIMITED WARRANTY	34

Introduction to the AST Endurance

The AST Endurance™ Bead Filter is the newest addition to Aquaculture Systems Technologies' line of PolyGeyser® filters. This technology is a radical improvement within the PolyGeyser® line and has been designed for long lasting, hands off operation. The auto-pneumatic backwash paired with auto sludge removal enables this filter to operate for extended periods of time without intervention.

Patented: US Patent 9,227,863 Patent Pending Canadian Patent CA 2287191 European Patent EPO 977713

These PolyGeyser® units are “bioclarifiers” capable of performing both biological and mechanical filtration. AST Endurance™ Bead Filters are capable of handling biological loads 50% to 100% higher than our Bubble Bead® or Propeller Bead® Filters equipped with standard bead media. Additionally, the AST Endurance™ Bead Filters offer a very high degree of reliability and are virtually immune to clogging and caking, since they backwash automatically without moving parts or electronics.

The elimination of water loss associated with backwashing is a key element in this new technology. In most applications, dozens of backwash sequences can be automatically executed before sludge removal is required. There is no water loss associated with the backwash process and the water loss associated with sludge drainage is negligible. This strategy is particularly advantageous for marine systems, where the loss of saltwater is minimized. This reduces or eliminates the need for large backwash water treatment units to reclaim saltwater since the water recycling happens within the filter.


The pneumatic strategy breaks the linkage between backwash frequency and water loss and allows the nitrification capacity of the unit to be fully utilized. Frequent backwash sequences have proven advantageous for optimizing the nitrification capacity. Numerous gentle scrubbing cycles promote high rates of nitrification by maintaining a healthy thin biofilm on the bead surfaces. Typical backwash cycles occur once every three to six hours. In recirculating bioclarifier applications, where the AST ENDURANCE™ Filter operates concurrently as a clarifier and biofilter, total ammonia nitrogen (TAN) levels below 0.3, 0.5 and 1.0 mg-N/l can be expected at feed loading rates of 0.5, 1.0 and 1.5 pounds feed per cubic foot of EN bead media (8, 16 and 24 kg-feed m⁻³ day⁻¹), respectively.



Endurance 2000 (l x w x h): 32 x 16 ¼ x 30 ¼

Endurance 4000: 46" x 25 ¾ x 40 ¼

ENDURANCE FILTER

		Filter Model		2000	4000
		Bead Media (ft ³)	0.75	1.75	
		Flow Rate (gpm)	8	18	
		Total Ammonia Nitrogen mg/L	Bioclarification Aquaculture Capacity for EN Media in lbs feed/day [*] :		
Warmwater (15-30°C)	Hardy Growout	1.5	1.5	3.5	
	Volume (gallons)		300	700	
	Growout	1	1.1	2.6	
	Volume (gallons)		225	525	
	Fingerling	0.5	0.6	1.3	
	Volume (gallons)		225	525	
	Broodstock/Fry	0.3	0.4	0.9	
	Volume (gallons)		300	700	
	Larvae	0.1	0.1	0.2	
	Volume (gallons)		45	105	
Coolwater (5-10 °C)	Hardy Growout	1.5	0.8	1.8	
	Volume (gallons)		150	350	
	Growout	1	0.6	1.3	
	Volume (gallons)		113	263	
	Fingerling	0.5	0.3	0.7	
	Volume (gallons)		113	263	
	Broodstock/Fry	0.3	0.2	0.4	
	Volume (gallons)		150	350	
	Larvae	0.1	0.1	0.3	
	Volume (gallons)		56	131	
Specific Aquaculture Applications	Bait Fish/Shrimp Holding (lbs)		75	175	
	Recommended Volume (gallons)		300	700	
	Max Oyster Holding ^A (lbs)		450	1050	
	Recommended Volume (gallons)		180	420	
	Warmwater Lobster Holding ^B (lbs)		225	525	
	Recommended Volume (gallons)		450	1050	
	Coldwater Lobster Holding ^B (lbs)		113	263	
	Recommended Volume (gallons)		225	525	
	Shrimp Growout ^C (lbs)		45	105	
	Recommended Volume (gallons)		900	2100	
Standard Koi Pond (lbs)		20	45		
Recommended Volume (gallons)		2000	4000		
Volume for Underwater Viewing (gallons)		225	525		

^A Assuming an oyster weight of 0.4 lb (meat and shell)
^B Warmwater is 10°C and Coldwater is 5°C
^C 14 week growout from a gram to 21/25 count shrimp
^{*} Maximum feed rates are dependent upon system management and operation

ENHANCED MEDIA SIZING SPECIFICATIONS



ENDURANCE 2000




ENHANCED MEDIA

This media performs both biological filtration and solids capture. The increased surface area protects the biological bacteria during the frequent vigorous backwashes.

ABOUT BACKWASH:


Your patented PolyGeyser[®] filter technology employs a static bed of beads to capture suspended solids and provide substrate for development of a biofilm to remove targeted dissolved pollutants (organics, ammonia). After time, the accumulation of solids in the bed begins to reduce the flow passed through the unit. Each application has its optimum interval for backwashing. In some cases, an extended backwash interval produces optimum performance and in others, and extremely short backwash interval is best. In broad terms, short backwash intervals (<6 hours) are associated with heavy loads. Best performance for lightly loaded applications is usually associated with extended backwash intervals (>12 hours).

Endurance Series

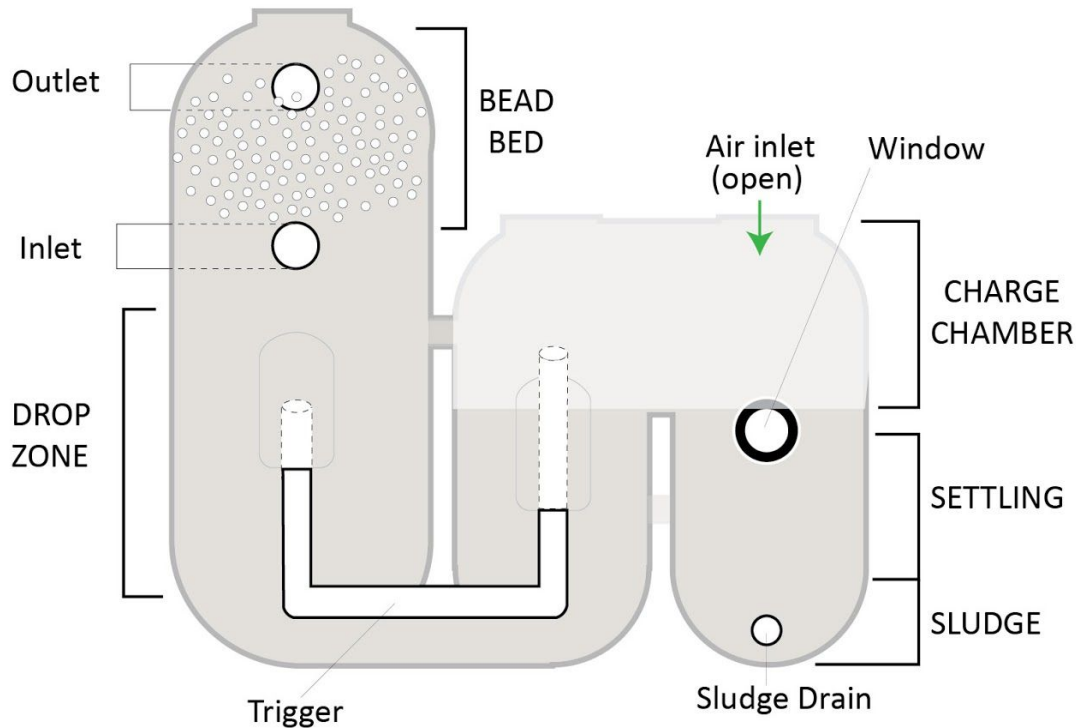


These exceptional filters backwash automatically, several times a day. The user does not need to turn off the pump or close any valves during the backwash sequence and no electric timer is required. The backwash cycle is regulated by the air that is injected into the charge chamber. The AST ENDURANCE™ cleans and recycles the dirty water produced in backwashing every two to three hours. Sludge is only removed once or twice a week. Consult this manual to take advantage of the fully automated options your advanced Polygeyser® Endurance Filter can provide.


Please note that air inlet location may vary on your unit compared to this diagram. Some of previous models have the air inlet towards the bottom of the middle chamber. Newer models feature the air inlet on the top of the filter. The filter will operate in the same manner.

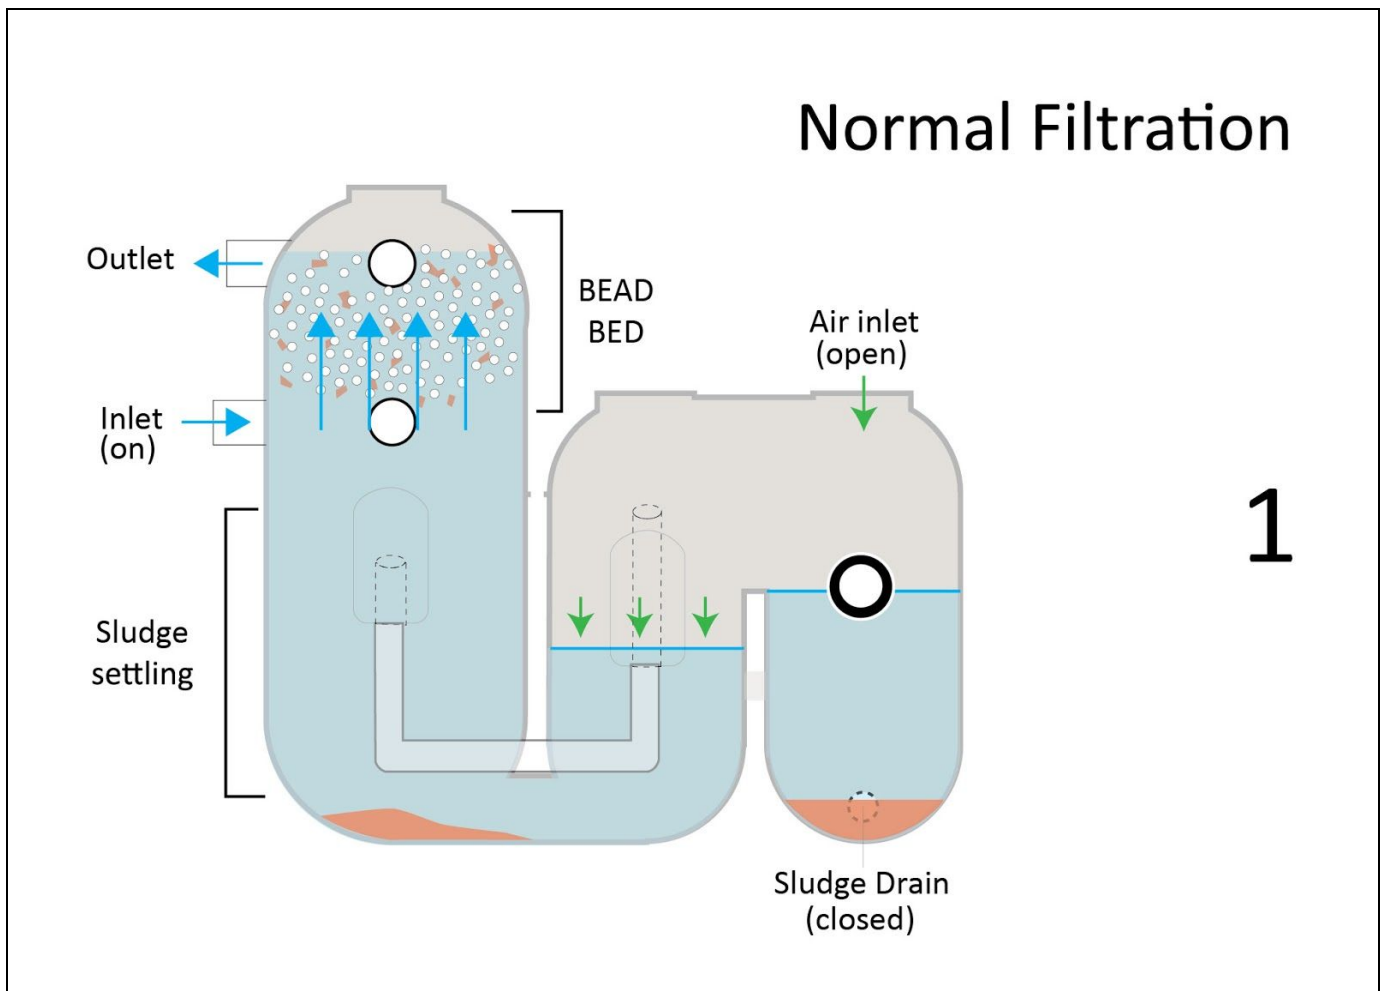


The water moves from the inlet up through the bead bed. The bead bed provides surface area for the water purifying bacteria and captures solids within the aquatic system. Air is slowly injected into the charge chamber, gathering in the top of the filter. As more air enters, this places downward pressure on the water level. The water level drops trapping water in the settling zone, and solids from the last backwash settle into the sludge basin. The rate of air injection controls the length of time between backwashing events.

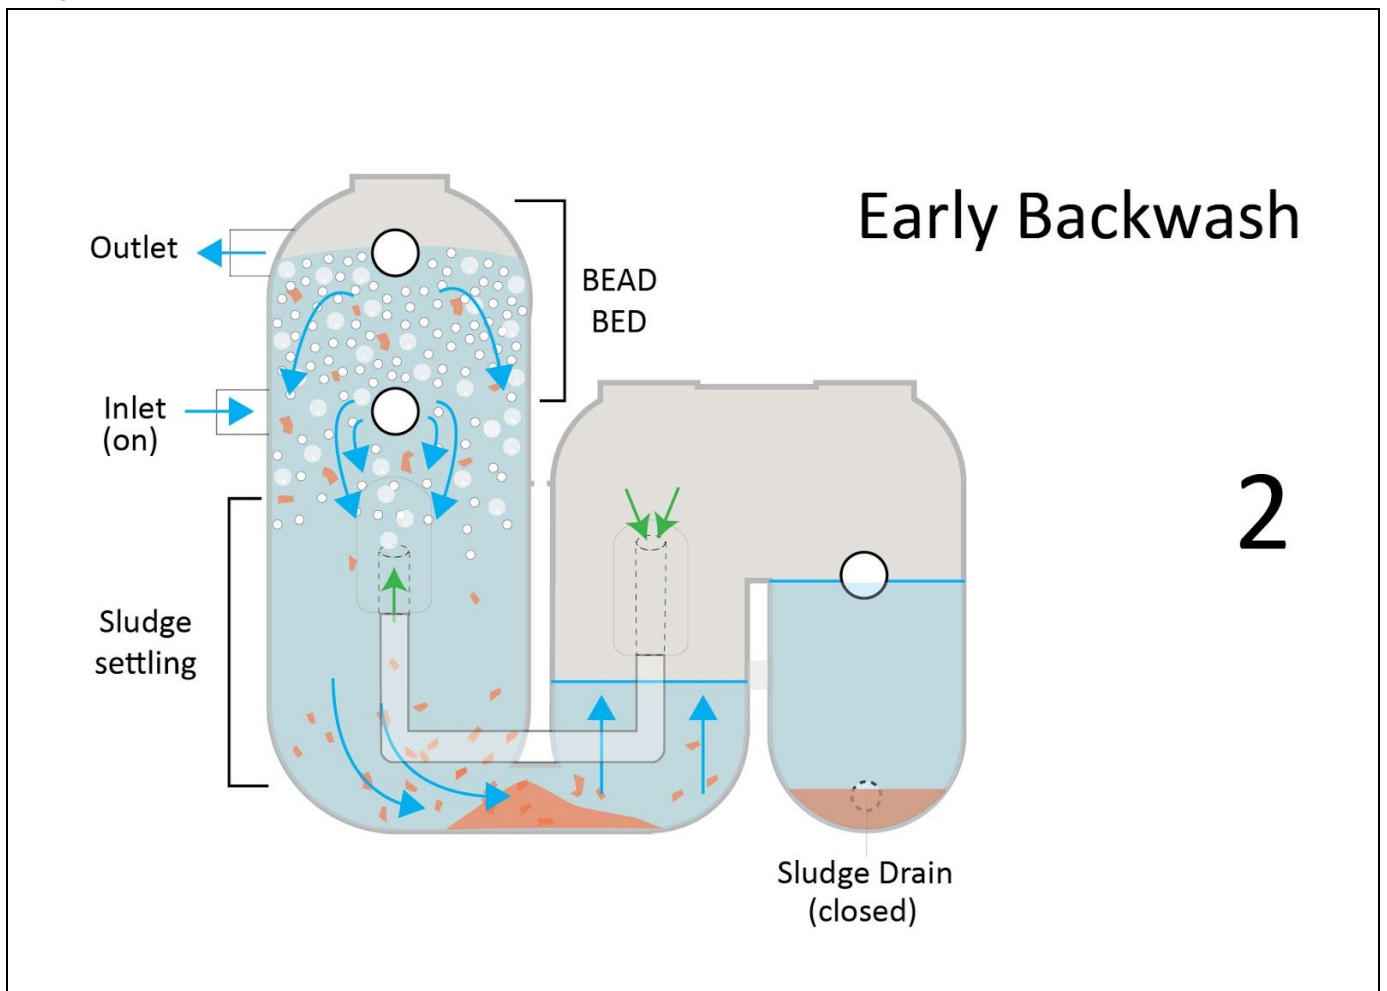


Air has made its way through the trigger into the bead bed. The bubbles agitate the beads; knocking solids and biofilm off the beads. As the air pressure in the charge chamber drops, the dirty water from beneath the bead bed sweeps through the chute carrying the solids into the adjacent compartment. No water flows out of the filter during the short 3-5 second backwash event; instead the dirty backwash water is captured in the charge chamber and the sludge basin. The beads float in the drop zone where they continue to be scrubbed by the escaping bubbles.

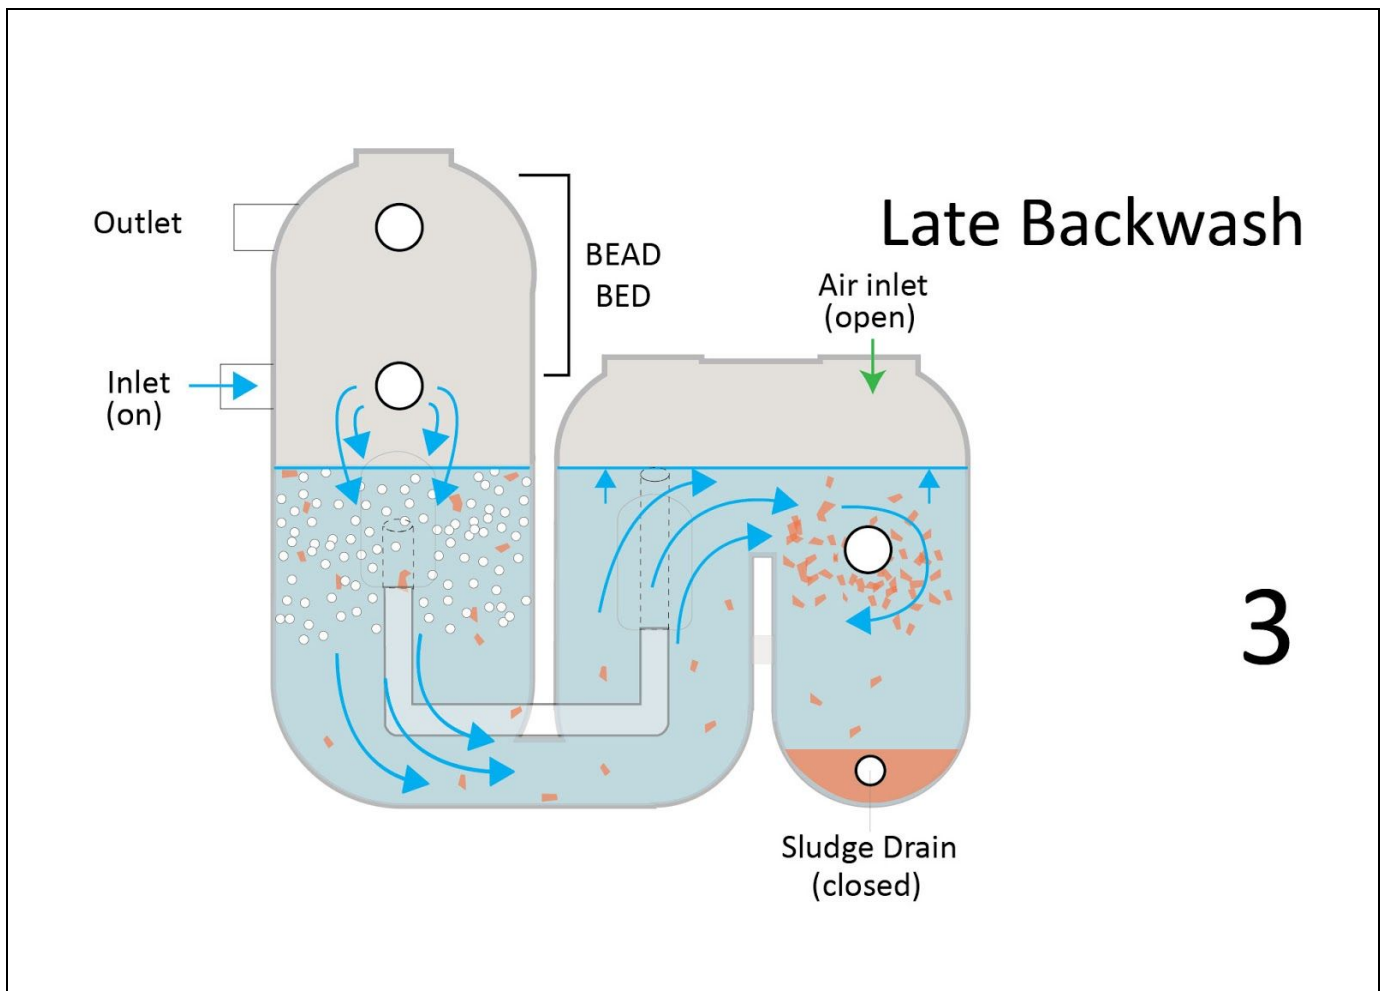

The water flows downward through the mixing bead bed and more solids are washed from the beds to settle towards the bottom. The downward flowing water sweeps into the middle compartment, flushing the solids that have accumulated on the bottom of filter and depositing them into the sludge basin. The water level rises in the shorter chambers.

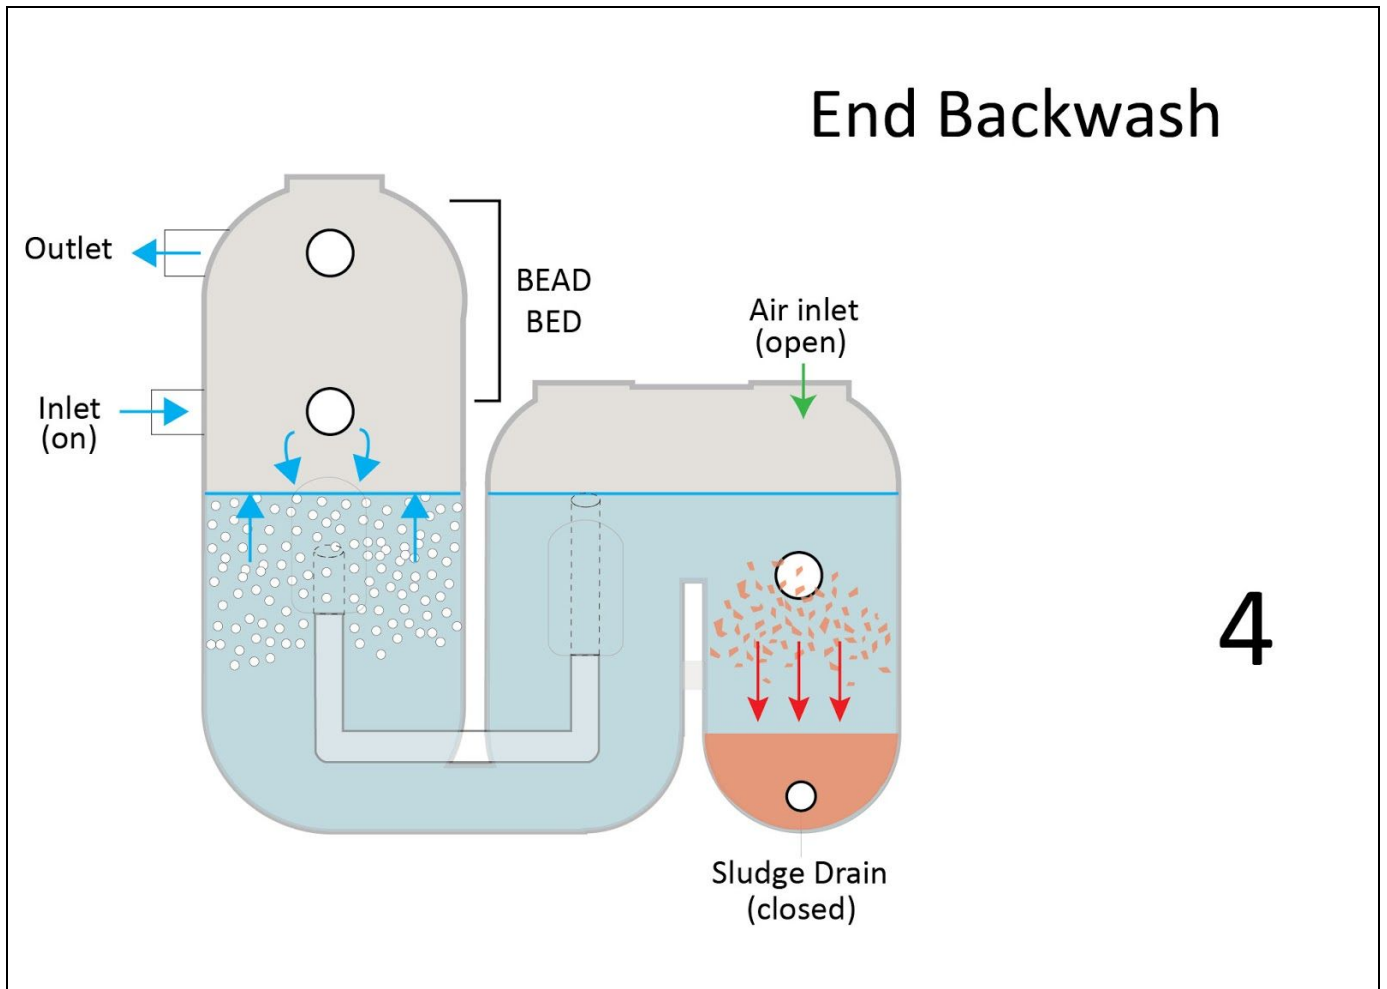

Eventually the water rising in the sludge chamber floods the trigger, bringing water movement in the charge chamber and sludge basin to a stop. Trapped solids begin to settle as the filtration chamber is refilled with the water from the inlet. The beads float back in place to reform the bead bed. As soon as the water rises to the outlet, filtration resumes. At the end of the backwash, the beads rise back to the top of the filter. Most settled solids have been swept to the sludge chamber.

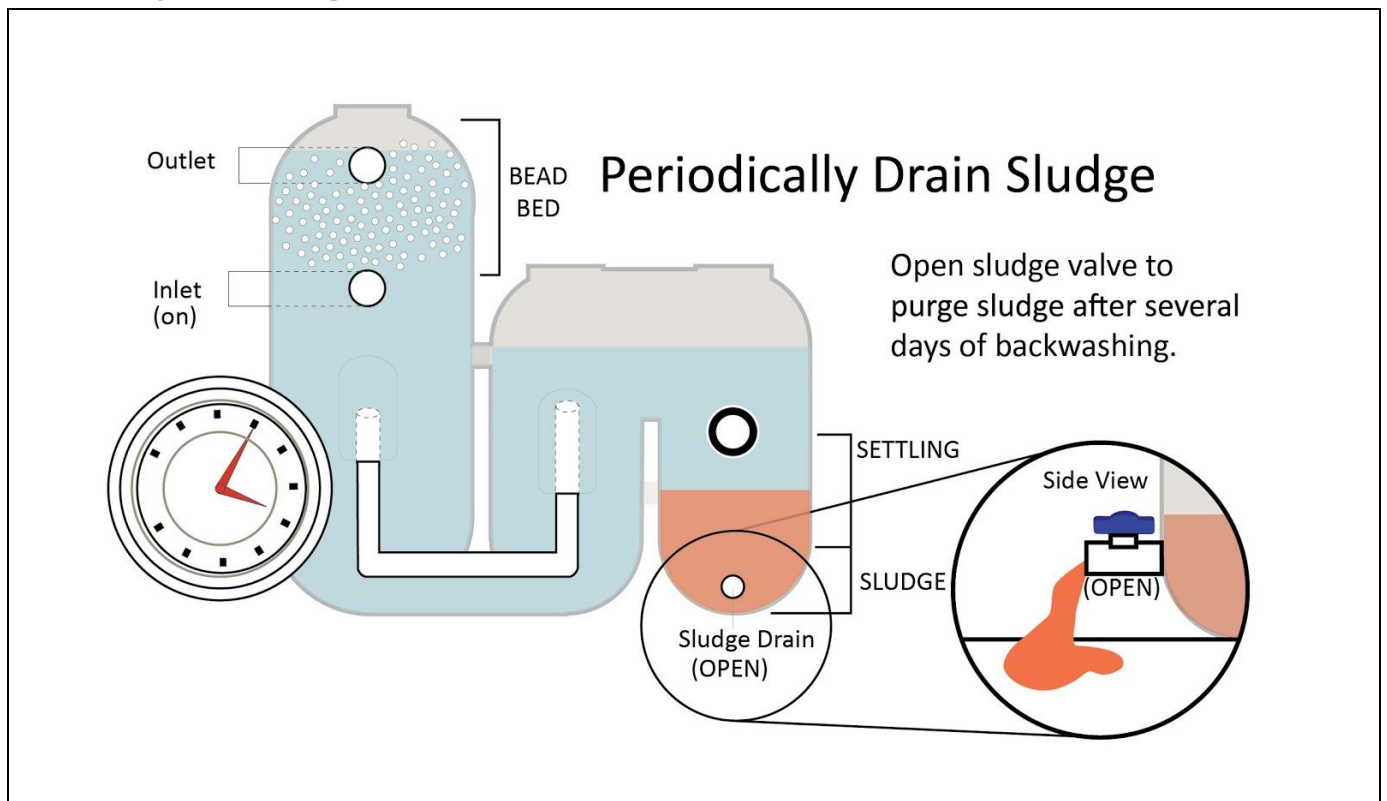

The filter will continue to operate and backwash several times a day (based on flow rates set by air flow meter). As the filter backwashes, solids will be shaken out and settle in the sludge chamber where they can be discharged. To drain sludge, open the sludge drain and collect the sludge in a bucket or basin. This waste is a natural fertilizer and can be safely used in aquaponics or land applications.

Limit sludge discharge volume to one gallon to prevent bead loss.

Do not drain the sludge when there is a bubble in the trigger. This is too late in the backwash and will cause beads to be discharged from the system. If you need to manually backwash your system, turn up the air to force the backwash and then drain after a backwash event. Then reset the air to the optimum backwash setting for your application.

Only drain sludge after a backwash event to prevent bead loss.

Sludge discharge frequency directly correlates to the backwash frequency. In heavily loaded systems, sludge should be drained one to two times per day. In lightly loaded systems, sludge can be drained less often.


Plumbing Configurations

The AST Endurance™ can operate using a water pump for circulation and an air pump for backwash, or with just air pumps in an airlifted configuration. To run off of an airlift, the tank water level has to be at least twelve inches above the top of the filter. If this is not possible, use a water pumped configuration.

Standard Pond Configuration with UV sterilizer: Water Pumped

Water is circulated through the filter using a water pump attached to the inlet assembly through flexible water tubing or PVC pipe. Water goes through the filter and out the top. This cleaned water can be directed through a UV for clearer water, or can go directly back to the tank or pond. Installation of a valve between the pump and the filter is recommended to allow for flow control.

Exceeding the recommended flow rate can result in fluidization of the bead media. If this occurs, simply throttle back the flow until the beads are no longer fluidized. If the beads are fluidized, they will not capture solids or backwash properly, resulting in reduced water quality.

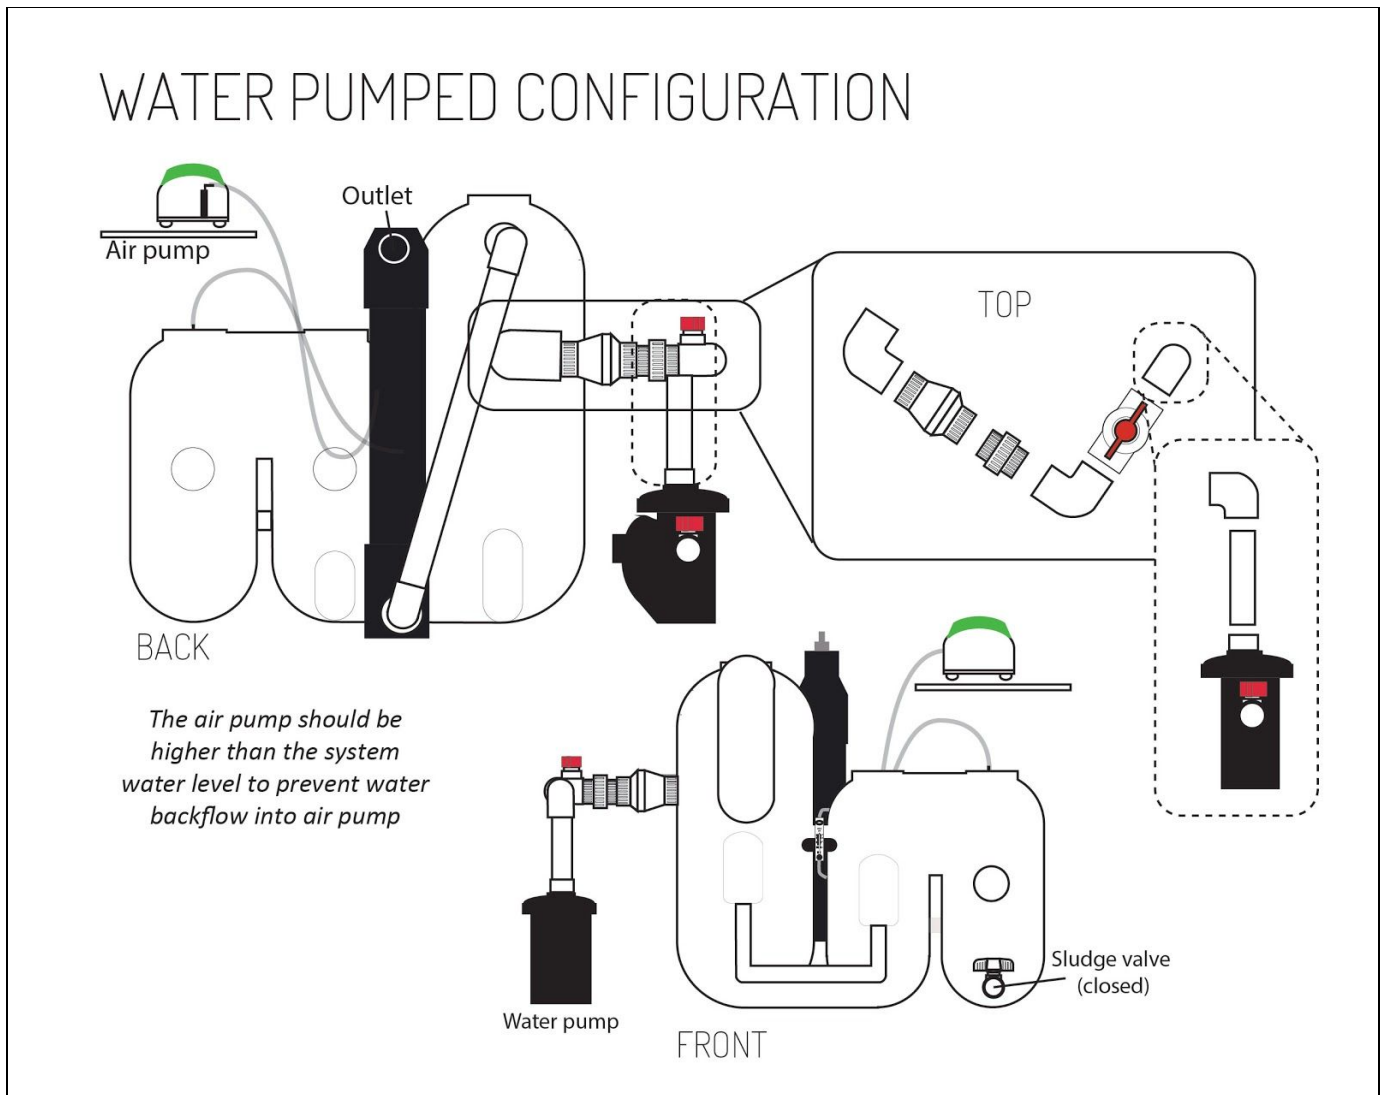


Over pressurization caused by improper installation or operation will void the warranty.


The AST Endurance™ is designed as a low-head filter. Operating pressure should therefore not exceed 5 PSI. Installation of devices causing excess backpressure on the discharge side of the filter should also be avoided. See *Water Pumped Units: Recommended Air and Water Pump Pairings* for suggested equipment.

Airlift Configuration

This configuration is for tanks whose water level is, at minimum, twelve inches above the top of the filter. Air is diffused from the air stone that is dropped down the top of the airlift return pipe. The bubbles lift the water back into the tank without the use of a water pump.

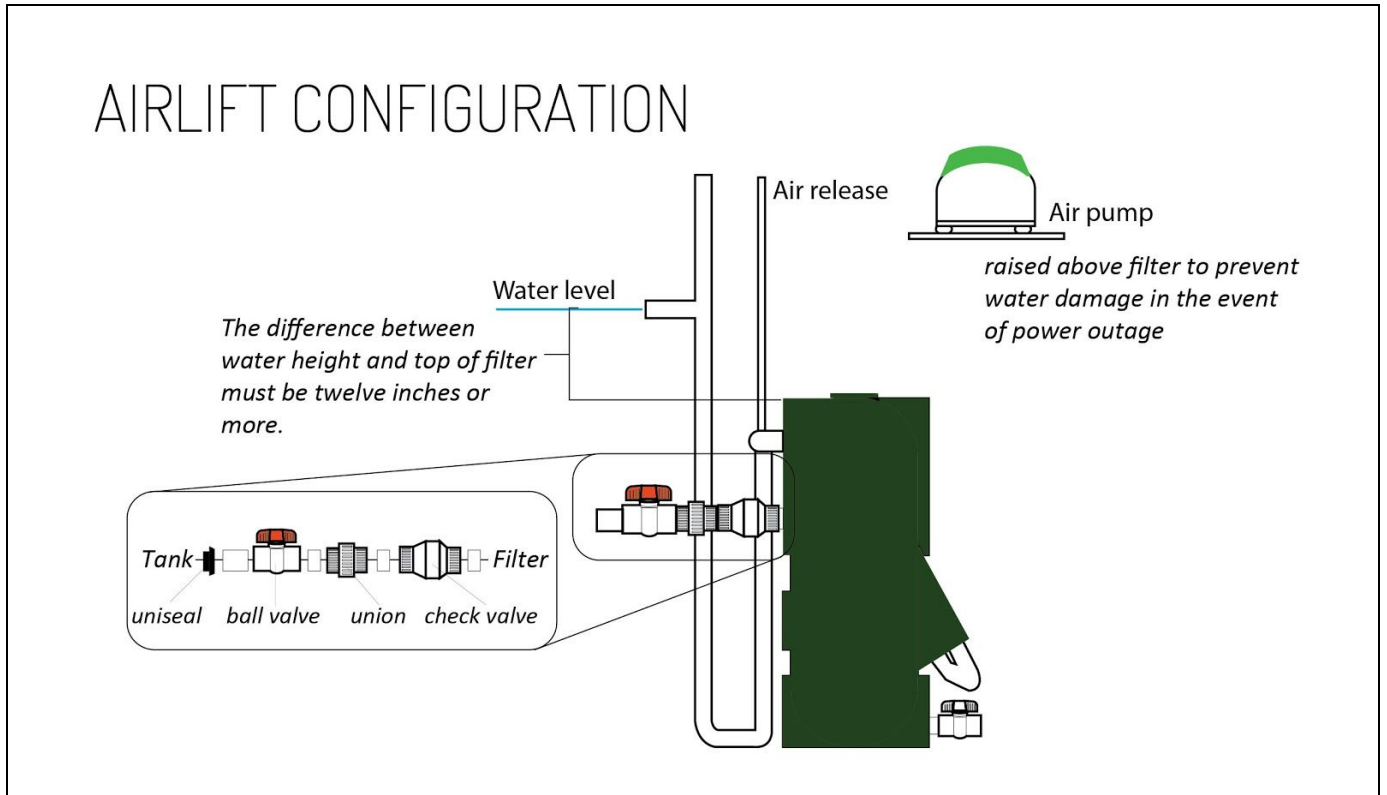


RAISED FISH TANK 2000

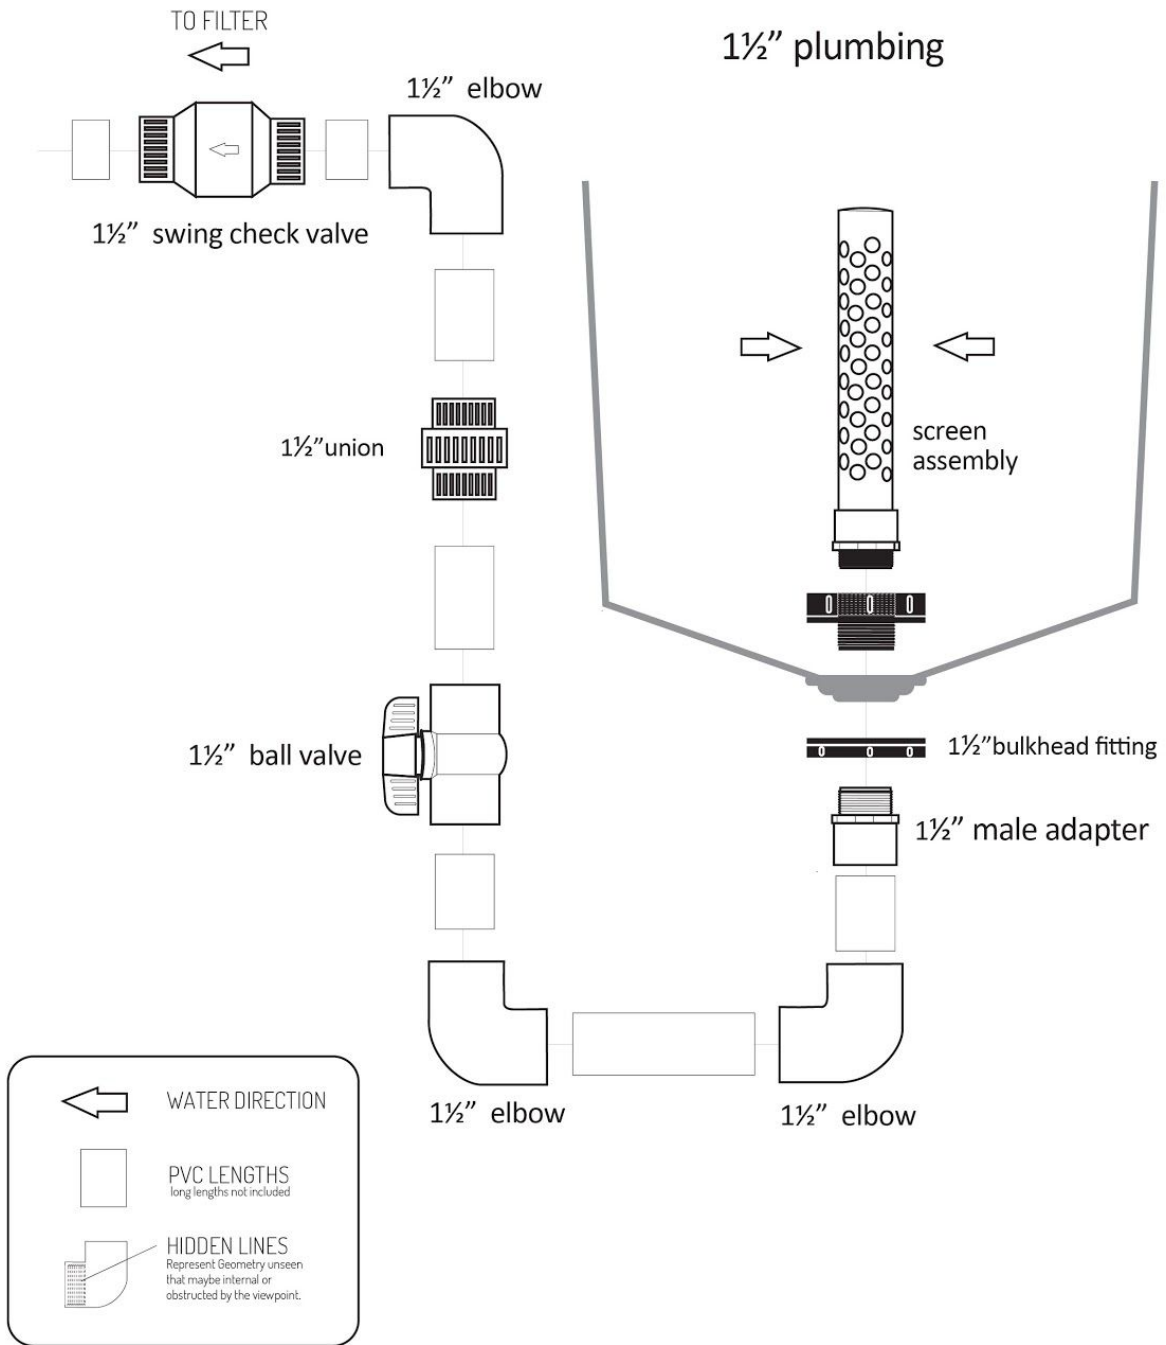


Tanks are usually raised on tank stands to allow for the necessary drop needed to create the necessary differential.

FILTER RETURN TO TANK 2000

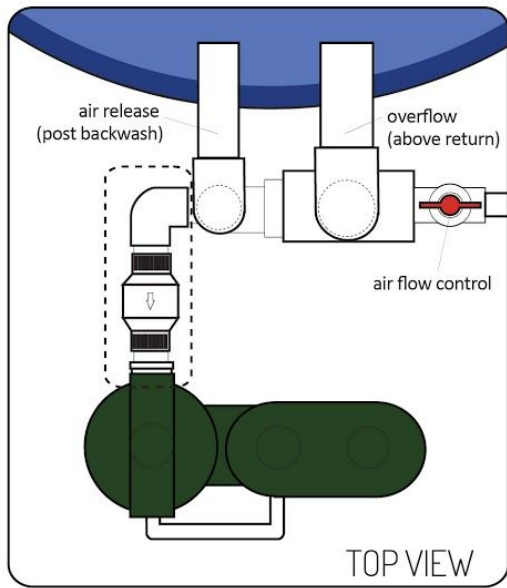


CUT LIST

INCORRECT ANGLE ASSEMBLY
SEE OTHER ILLUSTRATIONS FOR GLUING

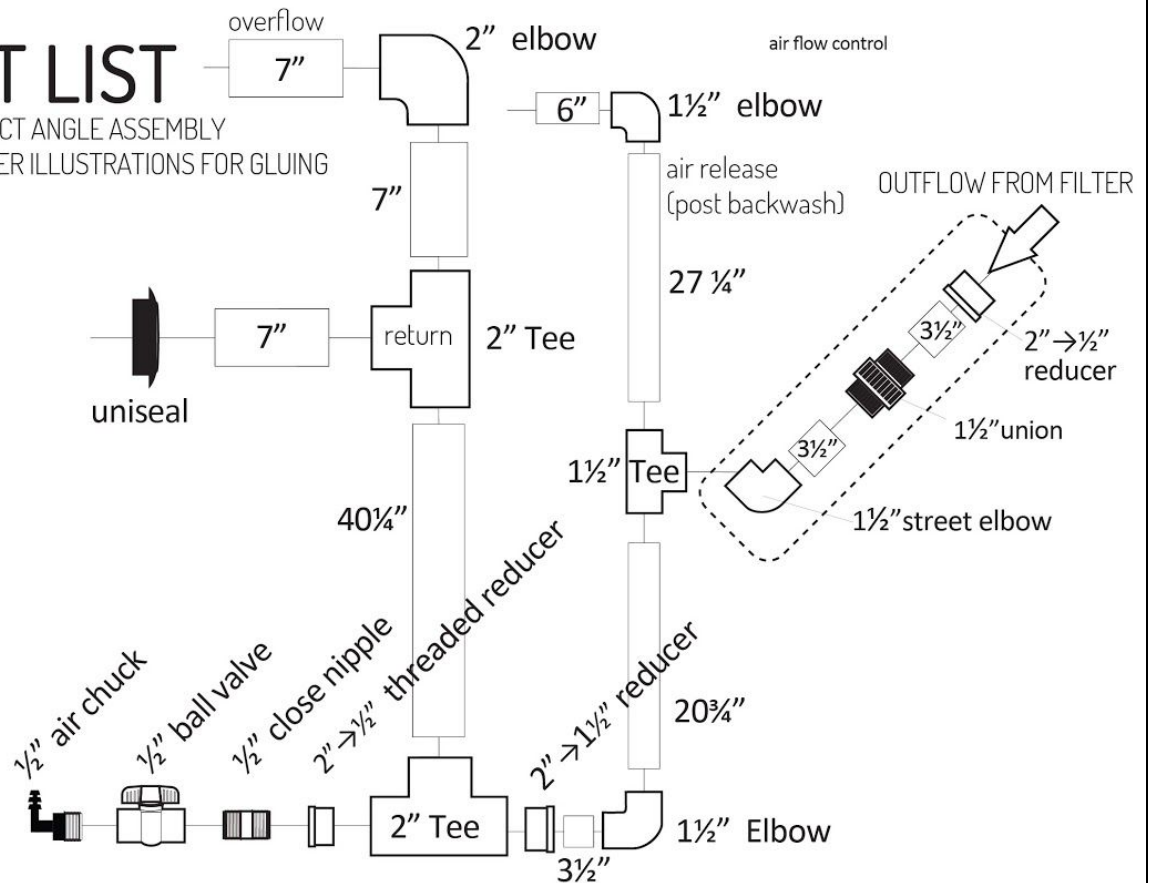


RAISED FISH TANK

4000

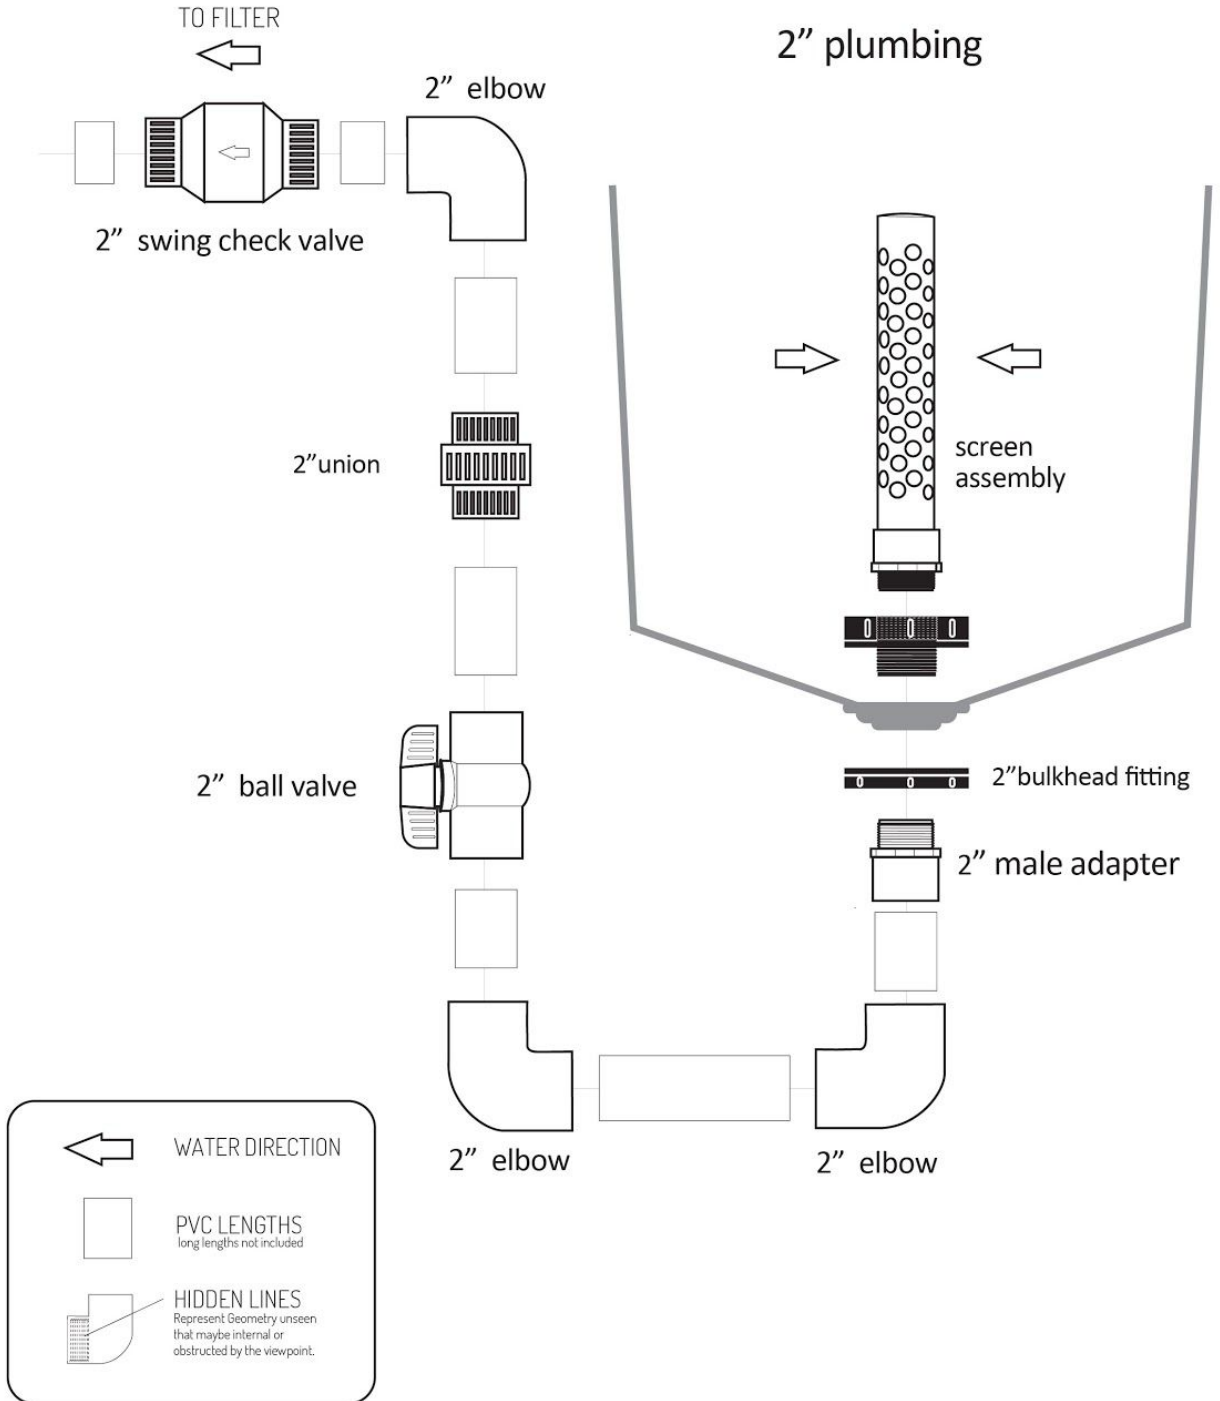


FILTER RETURN TO TANK 4000

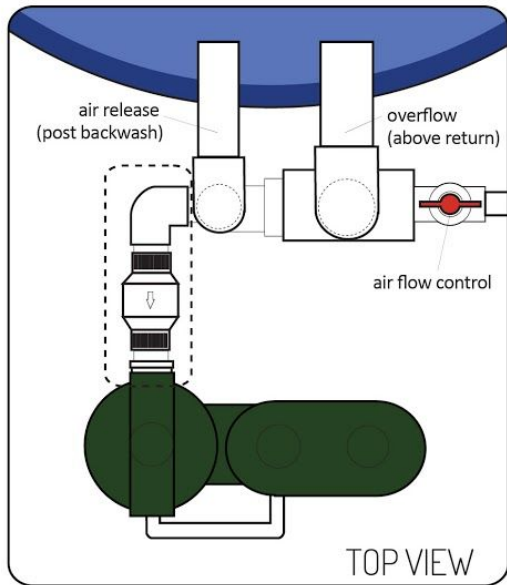

CUT LIST


INCORRECT ANGLE ASSEMBLY
SEE OTHER ILLUSTRATIONS FOR GLUING

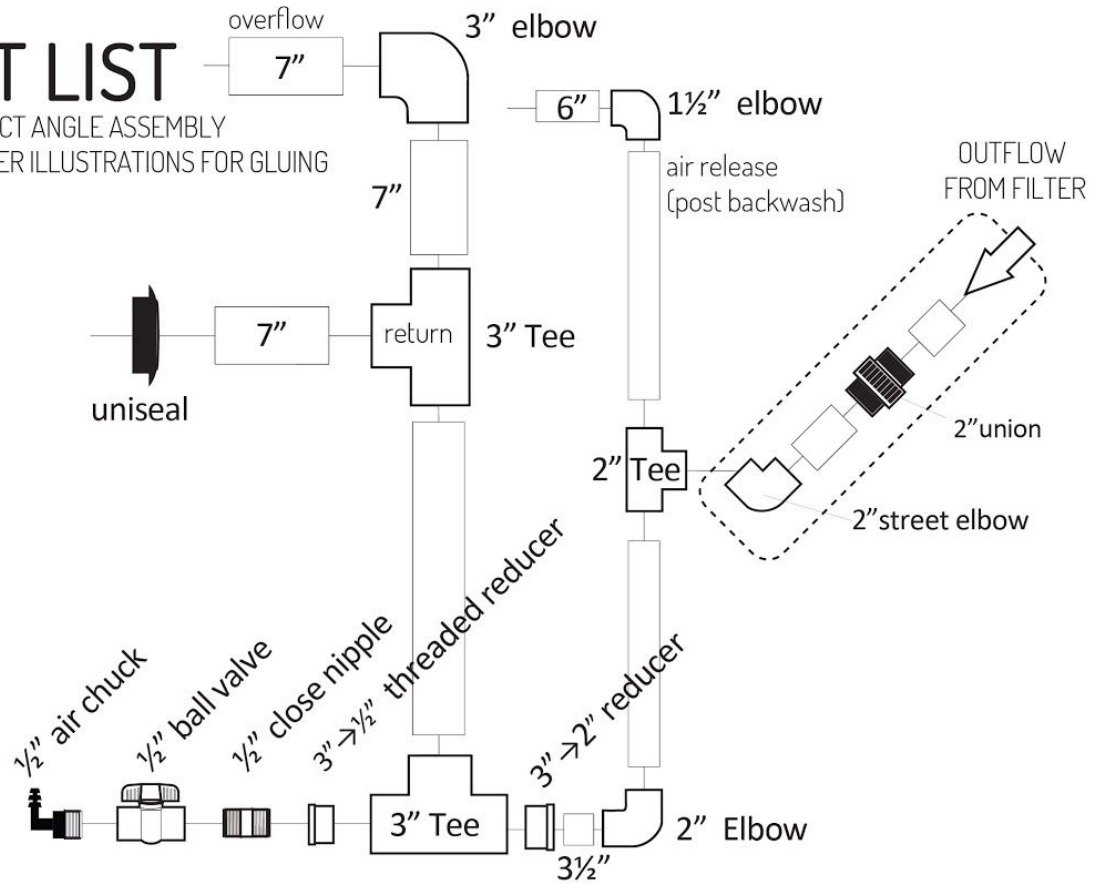

Installation

The AST Endurance™ is designed to accommodate two different operational configurations, i.e. **Airlift** or **Water Pumped**.

Before plumbing your filter, shift the beads from the smaller chamber into the large filtration chamber.

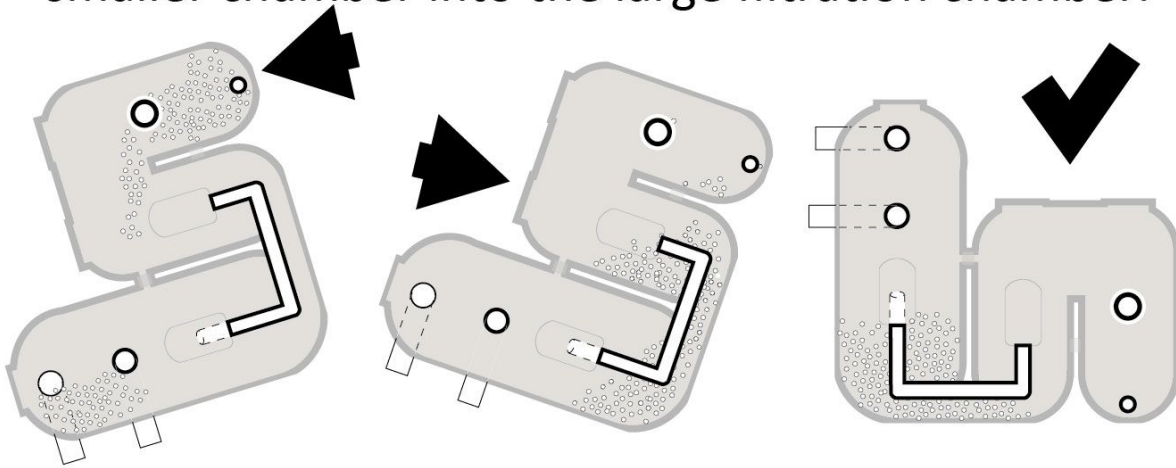


The goal is to move as many of the beads from the small chambers to the larger filtration chamber.




Do not open sludge drain until the startup procedure has been completed.

1. Prepare the filter's location. The AST ENDURANCE™ should be installed on a level surface. The top of the filter should be at least twelve inches below the fish tank water level if using an airlifted return.
2. Connect a return pipe, not provided, to the union at the top of the Endurance filter to run the clean filtered water back into the tank. See *Configurations* to set up an airlifted or water pumped system.
3. Attach air supply line to the ¼" barb connector. Install the air pump above the water level to prevent flooding in case of power shortage. A check valve must be placed in this line to prevent back flow of water into the air pump, which can present an electrical hazard.

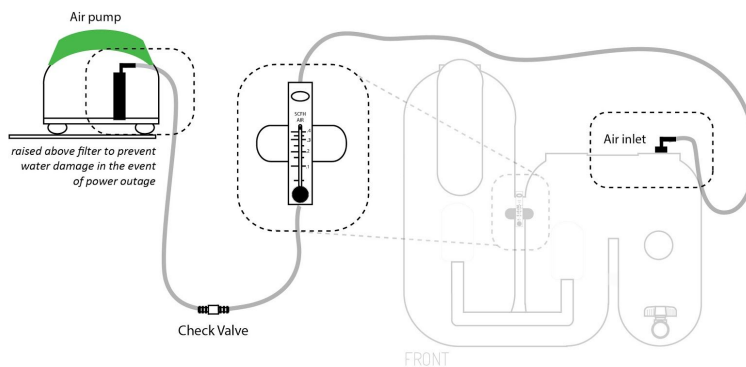

- If draining the filter on the ground is undesirable, a bucket can be placed under the drain valve or a PVC line can be ran to wherever the sludge should drain. The sludge can be used as fertilizer for plants. See *sludge removal options* for more details.
- Fill the tank or pond, set the air on high for the first 24 hours, and let the system circulate. Check all your connections and fix any leaks in your plumbing. The high air flow is necessary to move the beads back into the filtration chamber as they may have shifted during shipping.

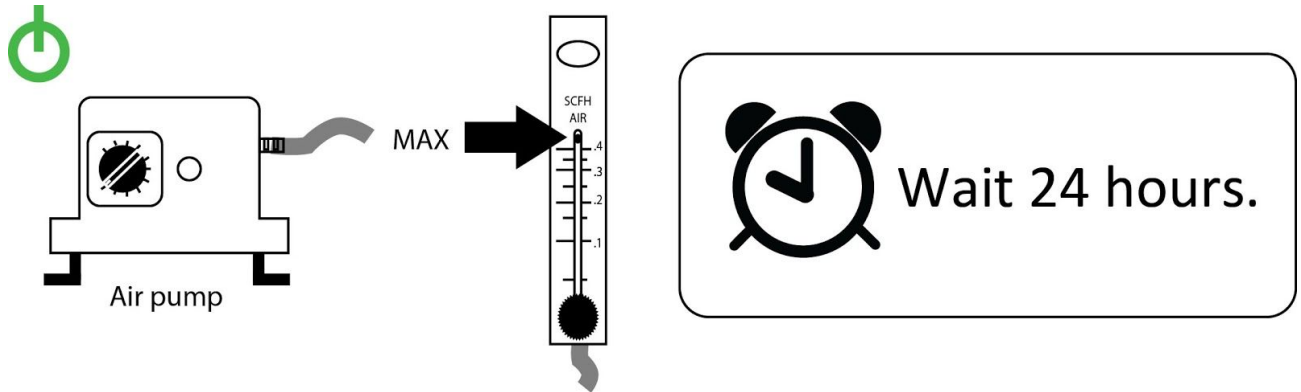

- Adjust the airflow down, so that the filter backwashes as prescribed by the charts below. More air flow initiates more frequent backwashes.

Adjust the airflow to the recommended settings for optimal operation. For optimum biological filtration, consult the table below.

Filter Model	Air Flow Rate (SCFH)	Backwash Frequency (Times per day)	Loading (Fish Density)
Endurance 2000	0.2	2	Ultra-Light
	0.4	3	Light
	0.6	4	Medium
	0.8	5	Medium-Heavy
	1	9	Heavy

Filter Model	Air Flow Rate (SCFH)	Backwash Frequency (Times per day)	Loading (Fish Density)
Endurance 4000	0.2	2	Ultra-Light
	0.4	3	Light
	0.6	4	Medium
	0.8	5	Medium-Heavy
	1	9	Heavy

7. The provided valve on the inlet of the filter should be closed when the system is off, or when the tank is being drained. Beads can be forced out by the backwash or siphoned out when the tank or pond is drained too low.


Sludge Removal Options

Raised Bucket Drain: Manual Operation

To drain sludge into a standard five gallon bucket, a few lengths of pipe and three 90° degree elbows can be used to increase the drain height to so that the sludge can easily be drained into a bucket placed on the ground. You can now transport the sludge to plants requiring fertilization, or dilute it to make 'compost tea' to water your plants. This pipe should stand as tall as the shorter chambers on the filter and dispense into the discharge receptacle.

Limit the sludge volume to one gallon to prevent bead loss.



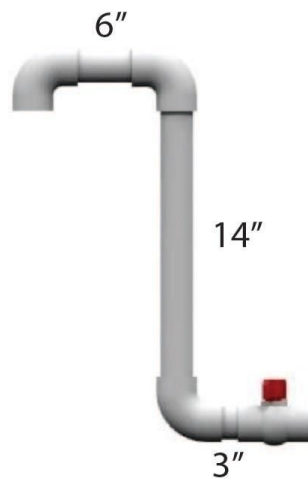

Parts:

3 QTY : 90 degree ball valves. Slip by slip


3 Lengths of PVC tubing: 6", 14", 3"

Ball valve included with filter


Pneumatic Sludge Discharge

A pneumatic sludge discharge dispenses sludge out of the system when the filter completes its backwash cycle. The height of the pipe above the filter determines how much sludge will be removed. Any system allowing for adjustable height will let you regulate the amount of volume purged during each backwash. The sludge can be collected into a bucket, sent to a garden, or down the drain where ordinances allow.

This is similar the bucket drain option, only with a higher pipe (taller than the highest filter chamber) and adjustable height options. The simplest height adjustment is to be able to pivot the assembly; making the height higher or lower, diagonally. This can be achieved with a few threaded pieces.

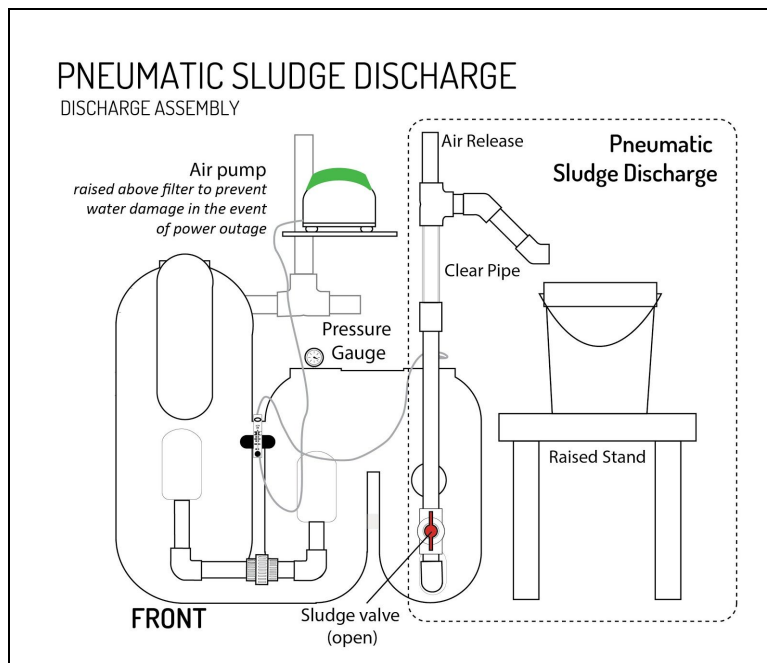




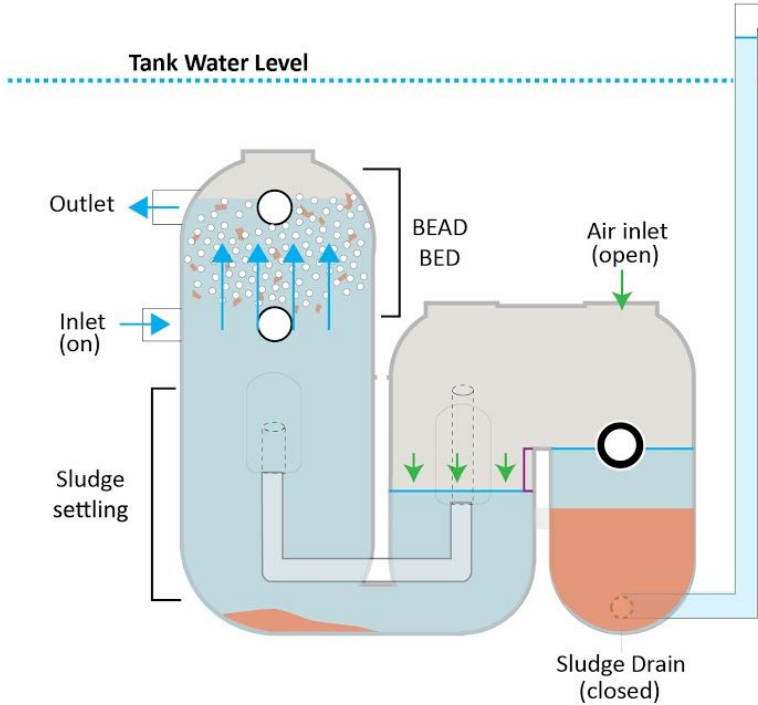


Pneumatic Sludge Discharge

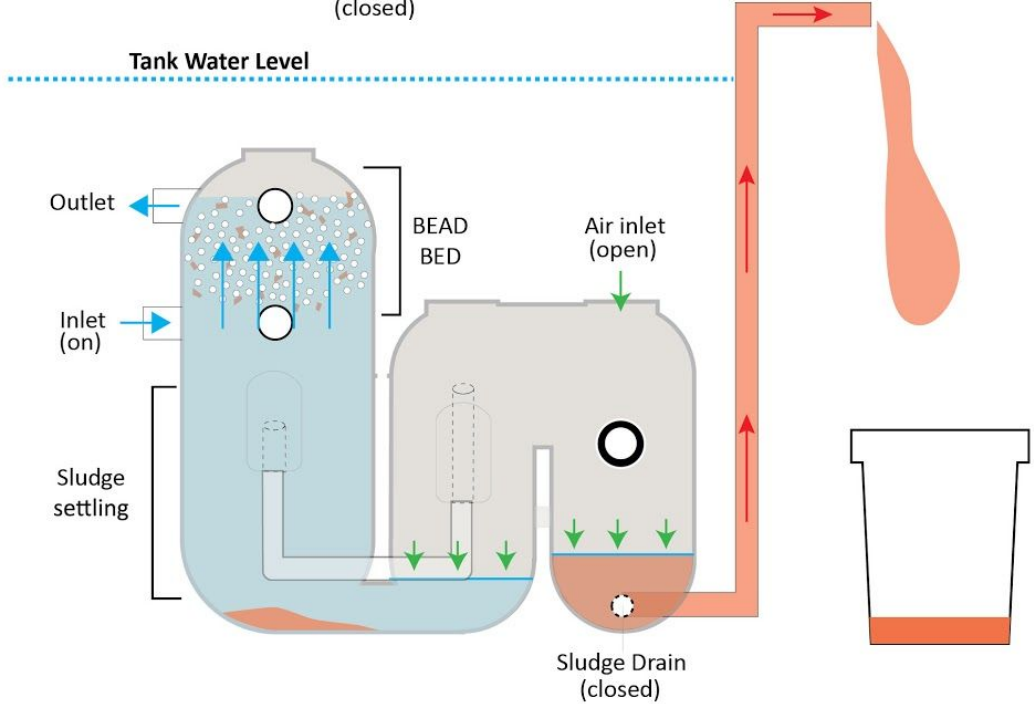

During filtration mode, sludge from the last backwash settles in the sludge chamber. Air pumped through the air inlet fills the charge chamber, placing downward pressure on the water. As the water is forced lower in the second chamber, the water level rises in the discharge tube.


When the water level drops in the second chamber, sludge is forced out of discharge pipe, out of the system. The height of the discharge pipe determines how much sludge water is discharged from the system. The taller the pipe, the less water is expelled during each backwash.



	Water Flow		Air Pressure		Beads		Bubbles		Solids
---	------------	---	--------------	---	-------	--	---------	---	--------

Pneumatic Sludge Discharge for Water Pumped Systems

No air release is needed in a water pumped configuration. A properly sized pump should be powerful enough to force the air through the pipes without airlocking the system. The air release on the PSD is a safety mechanism in the event that a blockage occurs in the PSD discharge pipe. This prevents overpressurization of your filter. If a blockage occurs, a long straight rod can be inserted from the top of the air release to break the blockage, allowing the PSD to discharge normally.

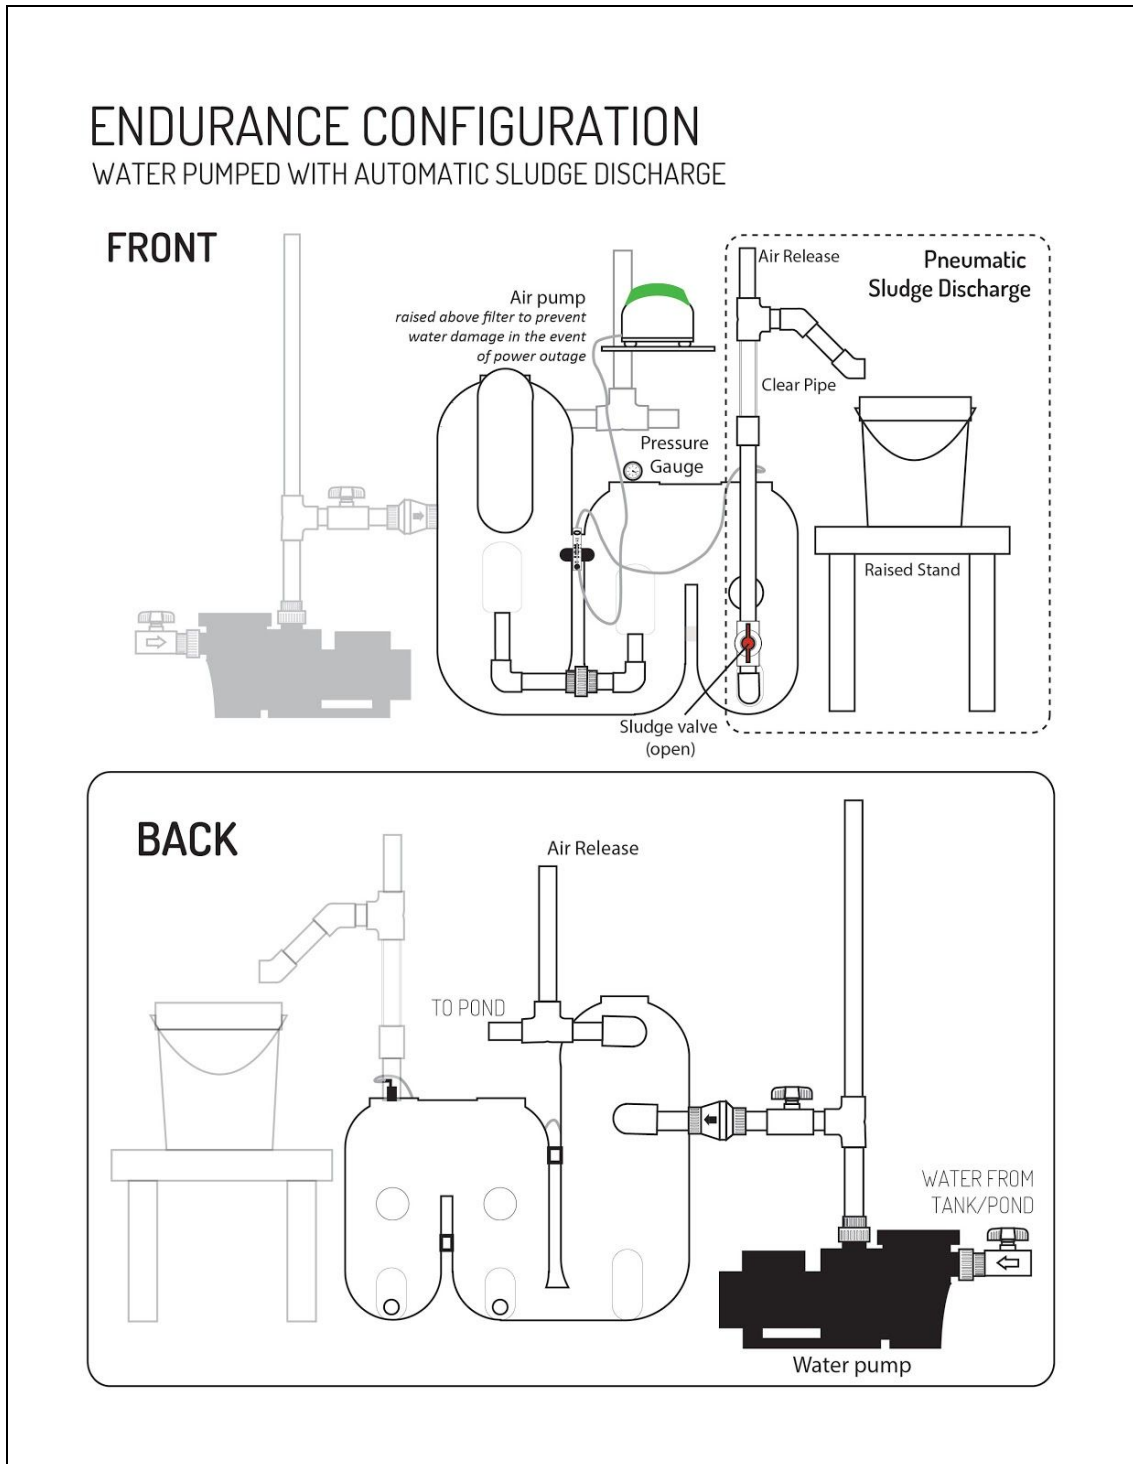

Water Pumped Units: Recommended Air and Water Pump Pairings

In selecting an appropriate air pump for the system, the air flow capacity (scfh or lpm) required to effect backwashes at the desired intervals as well as the air delivery pressure must be taken into consideration. When the filter is operated with a water circulation pump, the air delivery pressure must exceed that of the water pump to prevent accidental flooding of the air pump, which may present an electrical hazard. For this reason, the selection of air pump is ultimately dependent on the selection of water pump in water pumped systems. A check valve should be installed in the air line to prevent flooding of the air pump in the event of a power outage and to protect the air pump in case of excessive pressure development in the filter.

Install the air check valve on the air line before the air pump. Air can exit through the check valve. In the case of failure, the check valve will close so that water cannot flood the pump.

We recommend using an air pump capable of producing the most frequent backwash intervals that may be required. The flow rate can then be regulated by installing an air flow meter, with a built-in regulating valve. AST offers an air flow meter kit known as a SUFLOWKIT which includes an acrylic 1- scfh flow meter, aluminum mounting bracket and two ¼” barb fittings. If using a LUFT Air pump, you can adjust the air flow using dial directly on the pump, and the use of a SUFLOWKIT can be avoided.

Because of the danger of improperly selected water and air pumps, we have recommended pumps that work well with one another for Endurance applications. Please consult the tables below. **Failure to use appropriately sized air and water pumps can result in damaged air pumps and hazardous electrical situations. AST is not liable for any harm or damage caused by improper installation or sizing.** Incorrectly sized and/or installed units void the warranty.


Endurance 2000

Endurance 4000

Air Pump	Air Flow	Water Pump	Air Pump	Air Flow	Water Pump
AL-40	.05cfm@5 PSI	Tiny Might*	AL-40	.05cfm@5 PSI	Iron Might*


*Recommended Flow Rates shown below

PRESSURE VERSUS FLOW RATE

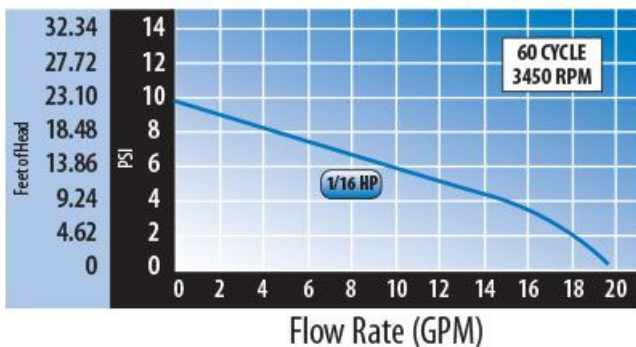

Tiny Might Flow Rates

PRESSURE VERSUS FLOW RATE

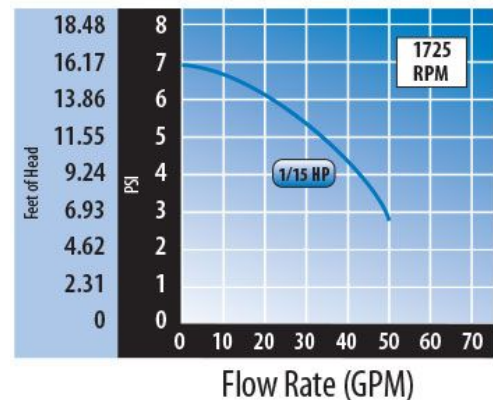

Iron Might Flow Rates

Airlifted Units: Recommended Air Pumps

The Polygeyser® units have a charge chamber that must fill completely with air to trigger the backwash event. An underpowered air pump will not backwash the unit frequently enough to sustain ideal water quality. These air pump recommendations are not for systems using a water pump for circulation within the system. See *Water Pumped Units: Recommended Air and water pump pairings* for water pumped configurations.

AST recommends using an air pump capable of producing the most frequent backwash intervals that may be required. The flow rate can then be regulated by installing an air flow meter, with a built-in regulating valve. AST offers an air flow meter kit known as a SUFLOWKIT which includes an acrylic flow meter, aluminum mounting bracket and two ¼" barb fittings.

Airlifted systems operate at a very low head. Several commercially available air pumps are capable of delivering the required volume and meeting the pressure demands for a single unit. Some recommended air pumps include:


MODEL	Air Pump	Air Flow
Endurance 2000	ALITA AL-40	1.8 CFM @1.4 PSI
Endurance 4000		1.6 CFM @2 PSI
		1.3 CFM @3 PSI

Listed air pumps are for minimum required airflow to airlift at designed flow rates. If you have a larger system or specialty application, please consult with AST sales or technical staff for assistance.

Another option is to use small oil-less air compressor with a storage tank and built in pressure regulator. The storage tank will provide improved overall stability and means the air compressor does not run continuously. Additionally, the pressure regulator allows you to set the air output pressure so that it will be greater than the pump output pressure at all times. AST often recommends this set up for operating multiple units. Sears, Home Depot and Lowe's all sell these types of portable air compressors. A disadvantage of using an air compressor is the noise produced when the compressor turns on to refill the storage tank, this should be insulated from the fish to reduce stress.

The size of the compressor depends on the number of units needing to be backwashed. A portable air compressor, which stores air in a tank at 90-100 psi, holds approximately 1.1 ft³ (8.2 gal or 31 L) of air per gallon (3.8 L) of tank storage space. AST recommends choosing a compressor with a tank volume of at least 8 gallons (30 L) per filter. The estimated time between successive compressor operations using a 8 gallon storage tank is approximately 30 minutes and the relationship seems to be linear so that 16 gallon tanks runs only once per hour. Note the time between compressor operations is approximate and may vary depending on a number of conditions including compressor manufacturer, temperature, and elevation above sea level. Note: a larger tank storage volume is always better and simply means your air compressor will run less often to keep the tank full.

Backwash Frequency

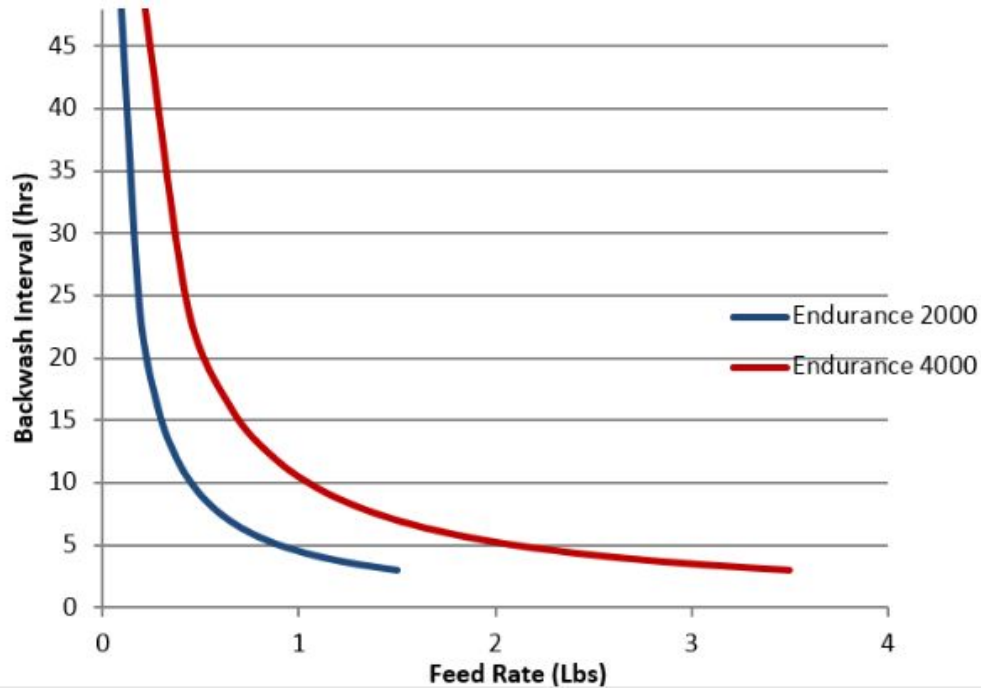

Your AST Endurance filter utilizes PolyGeysers® technology to employ a static bed of beads to capture suspended solids and/or provide substrate for development of a biofilm to remove targeted dissolved pollutants (organics, ammonia). After time, the accumulation of solids in the bed begins to reduce the hydraulic conductivity of the bed and the flow passed through the unit declines. Each application has its optimum interval for backwashing. In some cases, an extended backwash interval produces optimum performance and in others, an extremely short backwash interval is best. In broad terms, short backwash intervals (<6 hours) are associated with heavy loads. Best performance for lightly loaded applications is usually associated with extended backwash intervals (>12 hours).

In recirculating aquaculture or wastewater clarifier applications where the filter is used solely as a solids capture device reducing suspended solids levels, a high backwash frequency generally produces the greatest mass removal rate. In these applications, the targeted particle size range is usually of the order of >50 microns. Organics in the water will create a sticky surface that sticks particles together on the bead surface. Internal settling after a backwash is rapid, and backflush frequencies can be short (<hour) without adversely affecting filter performance. A good starting point for the backwash interval in a recirculating clarifier application is 3 hours. If a decline in flow through the filter (or an increase in hull pressure) is noticeable, increase the backwash pump airflow for more frequent backwashes.

If the application is focused on water clarity for display aquaria or zoo applications, then the Endurance should be used as a clarifier focusing on small suspended particles. A clean bed of standard sized beads has relatively poor

single pass removal efficiency (20%) for particles below 20 microns. Single pass capture of these particles is dramatically improved (>40%) once the bed begins to fill with biological or mineral solids. Excessive backwashing should be avoided in clarifier applications. Lightly loaded HPPG applications with a focus on water clarity (reduced turbidity) are generally associated with extended backwash intervals, perhaps, twice a week. In lightly loaded application seeking high water clarity, start with a backwash interval of once a day. Increase the backwash frequency (turn up the air) if the flow through the filter declines significantly as this is a sign solids are not being backwashed enough for your application.

In recirculating aquaculture applications, PolyGeysers® are widely used as bioclarifiers simultaneously removing suspended solids, dissolved organics, total ammonia nitrogen (TAN) and nitrite nitrogen. Here the limiting process step is usually TAN conversion since the TAN must diffuse into the biofilm prior to conversion. Carbon to nitrogen ratios are relatively stable being fixed by the protein content range of the feed. Backwash frequencies must be increased with organic loading (pounds feed/cubic foot beads per day) to offset the smothering effect of heterotrophic bacteria on the slower growing nitrification bacteria.

In recirculating applications, the backwash tuning success is reflected in the TAN and Nitrite concentration. It is not uncommon to see the TAN concentration reduced by 50% with a small change in backwash frequency. The limits of backwash frequency are defined by the nitrite oxidizing bacteria (NOB). Backwash too often and the NOB are “washed out” as the biofilms mean cell resident time (MCRT) drop; Wash too slowly and oxygen transport into the biofilm will drop, triggering or reversing the NOB oxidation process. So watch for the telltale rise in nitrite as you optimize backwash frequencies. In domestic wastewater treatment where biological oxygen demand (BOD5) and Total Suspended Solids (TSS) are targeted, frequencies tend to be high (once every 3 hours) to maintain hydraulic conductivity of the bed. The backwash frequency for biological operation is largely controlled by the organic loading (kg-BOD5/m³ of bead-day). Failure to backwash frequently enough leads to clogging of the bead bed as heterotrophic bacteria attack readily biodegradable organics.

Replacement Parts

Description	Part No.
1" Ball Valve	HMIP100SE
1 ½" Ball Valve - Endurance 2000 Intake	HMIP150SE
2" Ball Valve	HMIP200SE
¼" npt x ¼" barb air inlet fitting (polyethylene)	TE2044P
3" to 2" Reducer bushing for Endurance 4000 Inlet	437-338
Enhanced Nitrification (EN) Bead Media	BEAD-ENMEDIA2
Endurance 2000 Suflo Kit	END2000 SUFLO
Endurance 4000 Suflo Kit	END4000 SUFLO
Pressure Gauge	2141GXB30PSI
AL-40 (air pump for backwashing)	AL-40

Troubleshooting Your Endurance Filter

Elevated Nitrite (NO₂) Levels

- Elevated levels of Nitrite may occur if the dissolved oxygen concentration in the effluent leaving the filter drops below 2 mg/l. Low DO concentrations leaving the filter can often be solved by increasing the dissolved oxygen levels in the tank/pond or through increased aeration or by increasing the flow rate through the filter.
- Elevated Nitrite levels may also occur if the total alkalinity (as CaCO₃) drops below 80mg/l. AST recommends alkalinity be maintained at 100-200 mg/l as CaCO₃ at all times. If experiencing low alkalinity, simply add baking soda periodically to the filtration system to maintain proper levels. Sodium bicarbonate is not suitable for aquaponics applications because sodium can harm plant development and growth. Applications of different liming agents, such as potassium hydroxide (KOH) and Ca(OH)² are recommended for balanced plant growth and will provide the necessary alkalinity in systems with plants.
- Elevated Nitrite levels can also occur from over-washing the bead bed. If the flow rate, effluent oxygen and alkalinity are satisfactory, the backwash frequency can simply be reduced. This situation typically occurs when you go from periods of high loading and frequent backwashing to periods of reduced loading but still maintain frequent backwashing.
- Although generally the nitrification can be achieved across a wide ban of backwash intervals, backwashing for cold water systems must be more carefully managed. Generally, backwashing should be limited to a low frequency (<1 day) for cold water applications. The reduced frequency allows more time for the slow growing NOBs to recover from backwashing biofilm damage.

Low Effluent Dissolved Oxygen

- Low Effluent Dissolved Oxygen concentrations are usually the result of a too low flow rate. Effluent D.O. concentrations should be maintained above 2 mg/l at all times. If water is not flowing through the filter at the filter's maximum flow rate, simply increase the flow through the filter.
- Or increase the amount of aeration in the tank or pond to increase influent D.O. concentrations which will usually result in increased effluent D.O. concentrations.
- Low DO concentrations may also occur if the backwash frequency is set too low. If the bead bed is allowed to clog, reduced flow and effluent oxygen concentrations will occur. This will affect the nitrification performance. Please refer to "Backwash Frequency" section for recommended backwash frequencies at various feeding rates.
- Low D.O. concentrations can also result if sludge from the filter is not removed often enough. The sludge should be drained every week minimum, to prevent excessive oxygen consumption by the activity of heterotrophic bacteria.
- Low dissolved oxygen levels in the filter effluent can also be caused by low dissolved oxygen in the influent (or fish tank). Filter sizing is generally based on the assumption that the influent dissolved oxygen

concentration is between 5-6 mg/l. Increase the aeration in the tank or consider operation the filter in a recirculating format with a well aerated sump.

- In the some application the organic content (BOD) of the influent water is so high that the heterotrophs consume all the oxygen. In this case, the backwash frequency can be raised to increase the flowrate through the filter as the biofilm is more quickly removed. This procedure reduces the filter's organic loading because the bacterial biofilm is removed before it can fully respire. Filter oxygenation is improved by the higher flowrate.

Pressure Loss/Reduced Flowrate

- The most common cause of a drop in flowrate through an Endurance model is clogging of the bead bed because the backwash frequency is too low. Clogging can occur because of an accumulation of suspended particles or from excessive biofilm growth. To overcome this problem, simply increase the airflow to the charge chamber to trigger a more frequent backwash cycle.

Bead Loss

- There are approximately 500,000 beads per cubic foot. A small amount of bead loss through the sludge discharge is common. Collect those beads. You can confirm sufficient beads in the filtration system through the viewing window in the filtration chamber. If your viewing window is completely covered by beads, you have adequate beads for filtration. Approximately once per year, take the collected beads lost from discharge and reinsert them through the top of the filtration chamber.
- **If your filter is moved**, you will need to shift the beads from the smaller chambers back into the large one and run the air on high for twenty four hours. The remaining untransferred beads will move through the trigger back into the filtration chamber during frequent backwash cycles.

Acclimating your Filter

Development of a biofilm layer on the media is required for biofiltration. The bacterial culture, which grows attached to the beads, performs the biochemical transformations that are critical in the purification of recycled waters. Initially the biofilter has no bacteria and the culture must be started. The process of growing the initial bacterial culture in the biofilter or adjusting an established culture to a change in loading is called acclimation. Fortunately, the process of biofilter acclimation is easy. It just takes a little time and food for the bacteria.

If you already have an established system, keep your current filters running and add the Endurance filter. Bacteria from the active system will establish themselves on the beads. After three weeks, the old filter can be removed and the Endurance will take over filtration duties. This should reduce the odds of any dangerous nitrite peak that happens when a sterile system is starting.

One way to acclimate a brand new recirculating system with a biofilter is to just add a few hardy fish, turtles, or mollusks to the system and start to feed them. The total suspended solids in the system will pose no problem because bead filters capture solids primarily by physical processes that are not dependent on the development of a biofilm. The heterotrophic bacteria will grow rapidly and quickly attach themselves to the beads, so BOD accumulation should pose no problem. The nitrifying bacteria, however, are very slow reproducers and may require almost thirty days under warm water conditions (2 - 3 weeks is more typical) to establish themselves.

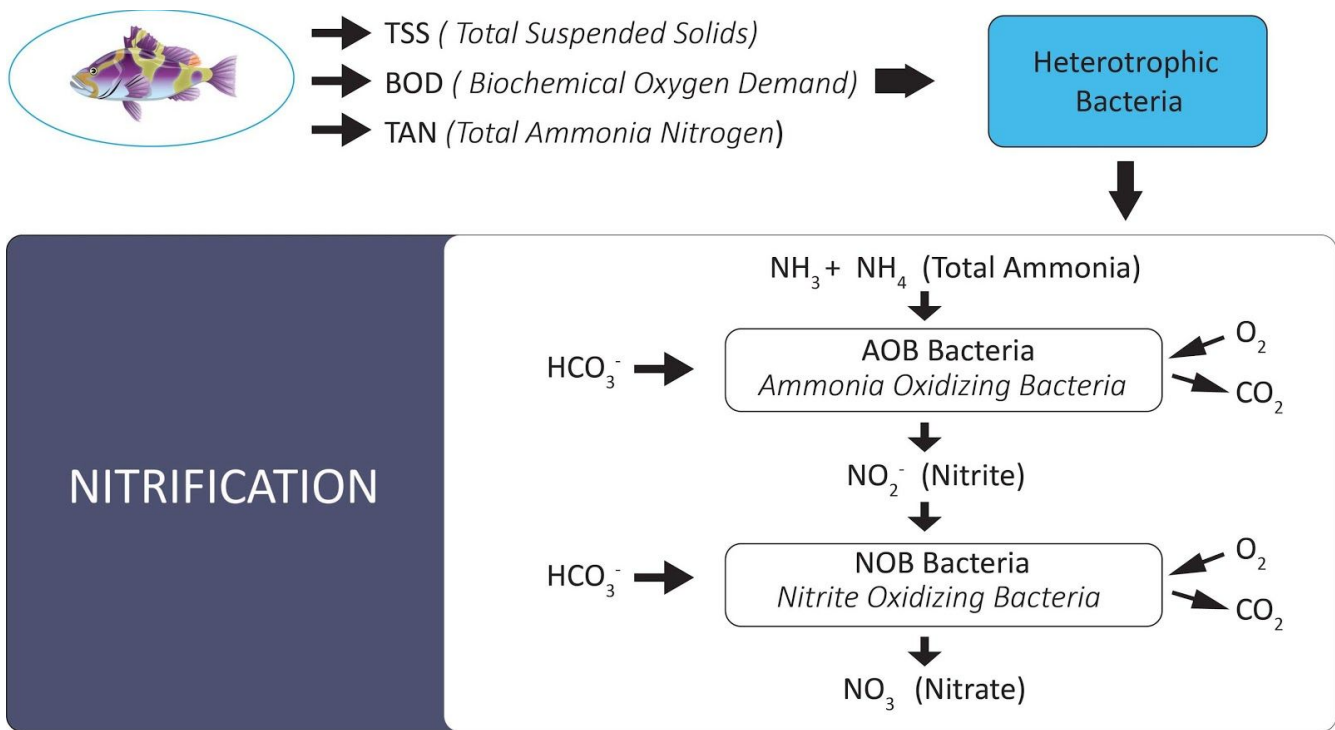


Figure 3 Two specialized types of nitrifying bacteria convert toxic Ammonia and Nitrite to the relatively safe Nitrate. Bicarbonate ions and oxygen are required in large amounts.

During acclimation, the backwash frequency of your *Endurance* filter should be 1-2 backwashes per day. This will keep the bead mixed and promote homogenous growth of nitrifying bacteria throughout the bead bed.

Figure 3 illustrates the classical pattern of TAN (total ammonia nitrogen) and nitrite concentrations observed during filter acclimation with animals. The process starts with an increase in TAN concentrations. This indicates that the first group of nitrifiers responsible for ammonia conversion to nitrite are present in large numbers when the ammonia excreted by the fish stops accumulating and suddenly (within 36 hours) drops to near zero levels. At the same time there will be a sudden rise in nitrite levels, followed by a gradual increase which will continue until suddenly the second group of bacteria, *Nitrobacter*, catch up with their new food supply and the nitrite concentrations plummet. The filter is now considered acclimated to a light loading. This initial stage of acclimation is critical because during this period populations of bacteria which can effectively attack the specific waste produced by the animals become established and these bacterial populations adjust to operate under the water quality conditions and temperature regime found in your system. This unique culture of bacteria will remain in the biofilter for years if it is just treated with a little common sense.

Table 3 summarizes things you can do to accelerate the initial acclimation of the bead filter. These procedures can reduce acclimation time to as little as two weeks in a warm freshwater system. One of the principal limitations of acclimating a filter with animals is that little or no nitrite is available for the growth of *Nitrobacter* until the *Nitrosomonas* population has become established. This means that the very slow growing *Nitrobacter* cannot even get started for over a week. Therefore, you can simply reduce the acclimation time by adding nitrite at the start.

The acclimation process becomes moot if you have an acclimated bead filter on your premises. Just exchange a few cubic feet of acclimated beads from the old filter with new beads and both filters will adjust rapidly. Lacking the beads, sludge from an established filter can help feed the bacteria. The bead filter will pick it up and leave the solids in intimate contact with the beads where the transfer of desirable bacteria will rapidly take place.

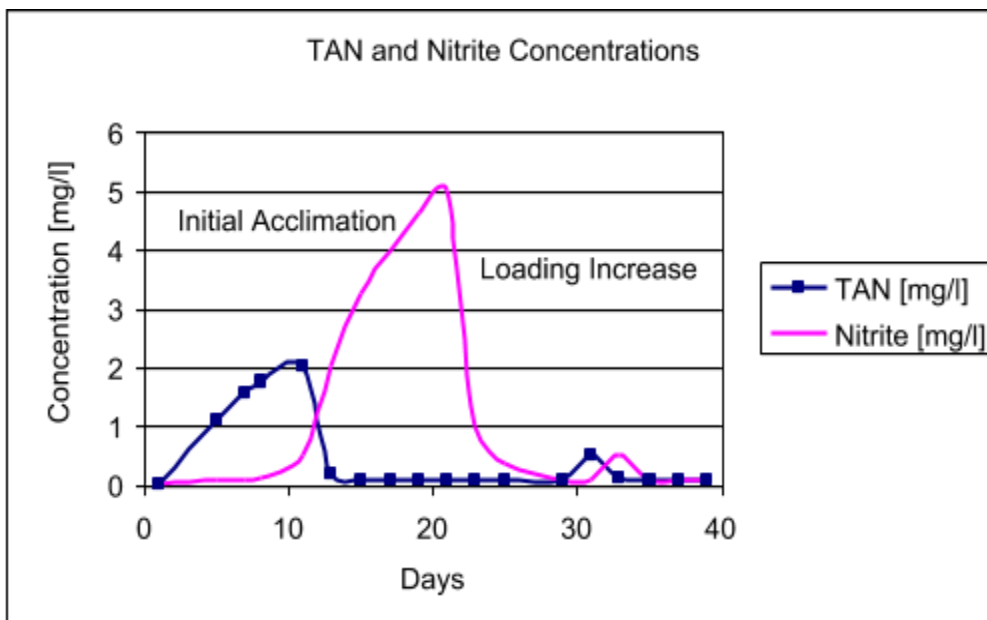


Figure 4. Tan and nitrite concentration build-ups are normally observed during the initial acclimation of a biofilter.

Table 3. Things You can do to Accelerate the Initial Acclimation of a Bead Filter

	<i>Procedure</i>	How does it help?
1	Add sodium nitrite at a concentration of 1 mgN/l on the first day.	Allows growth of <u>Nitrobacter</u> to start immediately.
2	Add backwash waters or beads from an established biofilter. *	Introduces species/strains of bacteria that are well suited for the bead filter's ecosystem.
3	Reduce Filter Backwash Frequency	Minimizes the loss of biofloc.
4	Raise the temperature of the system to 30° C.	Accelerates bacterial growth rates by increasing metabolic rates.
5	Adjust the pH to 8.0.	Accelerates bacterial growth rates by increasing ammonia (NH ₃) concentrations.
6	Add sodium bicarbonate to raise the alkalinity to 150 mg-CaCO ₃ /l	Accelerates bacterial growth rates by increasing bicarbonate availability.
* Disease may be spread with the biofilm, so make sure the source is healthy.		

You should be careful not to kill the animals, which are used to acclimated filter. The animals you select to use do not need to be the same as the ones you will be culturing. The best choice for freshwater systems is turtles. The ammonia and nitrite concentrations that will be reached will not affect these animals. Therefore, you do not have to worry. In-expensive domestic Koi or goldfish are good choices if fish are used. However, it is important that the fish or animals used during acclimation are disease free so as not to infect your high quality fish later. These animals can tolerate **short-term** exposure to TAN and nitrite levels of about 5 mg-N/l without harm if you keep the pH between 7.5 and 8.0 and add some sodium chloride (rock salt) or calcium chloride. Chlorides help prevent nitrite toxicity by blocking nitrite transfer in the gills. The pH range keeps the TAN in the less toxic NH_4^+ form. It is usually the nitrite peak, which is twice to three times as high as the TAN peak, which damages the fish. If the fish show signs of stress (inactivity, lack of hunger, or gaping near the surface), remove them; you will have plenty of food for the bacteria in the water column already. The fish should be reintroduced into the system once both the TAN and nitrite levels fall below 1 mg-N/l.

The initial acclimation assures that the biofilter contains the right type of bacteria. However, you then must adjust the amount of bacteria to assure there are enough of them to process the ammonia produced by the animals in the system. Therefore, the next step in the acclimation process is to increase the density of animals in moderate steps allowing some time for the bacterial population to grow to meet the increased demand. This process of acclimation to increased loading is normally undertaken with the animals of choice, since the TAN and nitrite peaks are small and quickly disappear. As a general statement, an acclimated filter will completely adjust to a sudden increase in fish density (or feed level) within 72 hours. If the step increase is moderate (< 33 percent of current load), the acclimation will probably occur without noticeable peaks. The heights of the acclimation peaks are actually controlled by the density of fish in the system, not by the size of the biofilter. That is, the nitrite peak in a system with a fish density of 0.25 pounds/gallon will display a peak concentration one-half as high as a system with a density of 0.5 pounds/gallon. Table 4 summarizes additional methods that can be used to decrease transitional peaks. The process of acclimation to increased loading occurs naturally if the bacteria and animals are allowed to grow together. The bacteria always grow faster, maintaining the proper balance between the biofilm and the animal density. For example, within a Koi pond, once the filter is acclimated to the fingerling density, the biofilter's ecosystem will take over and maintain the proper balance. Your management responsibility occurs when the natural growth processes are disrupted by sudden (unnatural) changes in the system.

Table 4. Things that Can be Done to Decrease Transitional Peaks of TAN and Nitrite When the Animal Density or Feed Rates are Increased

	Procedure	How does it help?
1	Increase your water loss from the system until the biofilters adjust.	TAN and nitrite will be flushed with the water.
2	Discontinue or reduce feed rate during the transition.	TAN excretion rates from most animals increases with feeding.
3	Make loading increases in small increments (< 33 percent of current load) and separate steps by about 3 days.	Existing bacteria will absorb most of the increased load and reproduce rapidly.
4	Extend backwashing interval (Backwash less frequently).	Decreases biofloc loss during the critical transition.
5	Adjust pH and alkalinity to optimum range.	Accelerates reproduction of nitrifying bacteria.

6	Artificially increase the TAN loading prior to the increase by dosing of ammonia chloride (NH ₄ Cl) and sodium nitrite (NaNO ₂) to a level of 1 mg-N/l.	Promotes growth of the critical nitrifying bacteria, enriching their density in the biofilm.
---	--	--

Appendix A: The Science behind Bioclarification

The term “Bioclarification” was coined some years ago by Dr. Ronald F. Malone, the inventor and patent holder of Bead Filter Technologies, to describe the ability of bead filters to perform both mechanical and biological filtration in the same unit. The ability of bead filters to perform these tasks is described in detail below.

Bioclarifier = Solids Capture + Biofiltration

Clarification

Bead filters perform well in the control of suspended solids across a broad spectrum of conditions. Bead filters capture solids through four identifiable mechanisms (Table 1). With the exception of adsorption, the solids capture mechanisms are physical in nature and are common to all types of granular media filters. As a general observation, the filters seem to control fine colloidal particles best with some biofilm development. This suggests that the biofilm absorption process is an important mechanism in the control of fine suspended solids and thus water clarity. Studies have shown that bead filters capture 100% of particles > 50 microns and 48% or particles in the 5-10 micron range per pass (Figure 1).

Table 1. Mechanisms Contributing to the Capture of Solids in a Bead Filter

Mechanisms	Comment
Straining	Direct capture of larger particles as they pass into small openings between the beads.
Settling	Sinking of suspended solids onto the surface of the beads.
Interception	Impact of particles directly onto the surface of a bed.
Adsorption	Small particles are captured and absorbed into the sticky biofilm.

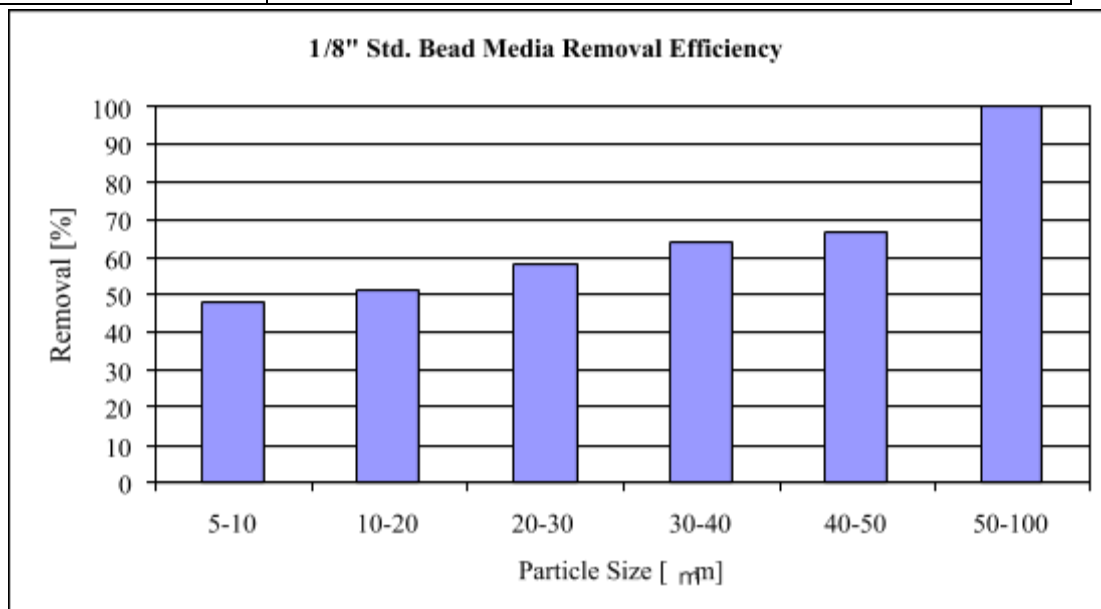


Figure 1. All particles above 50 microns are removed in the first pass through the filter and the remainders are removed with multiple passes.

The flowrate delivered to a bead filter is the principle management factor influencing suspended solids removal. The efficiency (single pass percent reduction in TSS) of a bead filter generally increases as the flowrate to the filter decreases; however, the capture rate (mass of TSS captured) tends to increase with flowrate. This apparent contradiction occurs because per pass efficiency is relatively insensitive to changes in flowrate, and so, minor drops in efficiency that occur with flow increases are more than compensated for by enhanced solids transport to the filter. Generally, recirculating rates used with closed or partially recycled systems should be maximized to obtain the lowest possible TSS level in the holding tanks.

Separation of captured solids from the bead bed is accomplished by sedimentation of released sludge after the bed is backwashed. Materials such as fats or wood chips merely float upward with the beads and are not removed. In sufficient quantity, these materials will eventually foul the bed requiring media replacement. Bead filters are also not well suited for the clarification of waters suffering from mineral turbidity problems caused by fine clays or other colloidal particles. Lacking good biofilm development, the mechanisms for the capture efficiencies are unacceptably low. Finally, the bead filters will impact but cannot control planktonic algal blooms. Although some capture occurs as a general rule, the algae can grow faster than they can be caught and thus little progress towards clarification is made. Application of the bead filter technology to the problem of colloidal mineral turbidity or algal blooms requires the use of supplemental treatments (chemical flocculation or U.V. disinfection, respectively) or the filter will be ineffective.

Biofiltration

In the biofiltration mode, bead filters are classified as fixed film reactors. Each bead (Figure 2) becomes coated with a thin film of bacteria that extracts nourishment from the wastewater as it passes through the bed. There are two general classifications of bacteria, heterotrophic and nitrifying, that are of particular interest (Table 2). The two bacteria co-exist in the filter, and understanding their impact on each other as well as on the filter is critical.

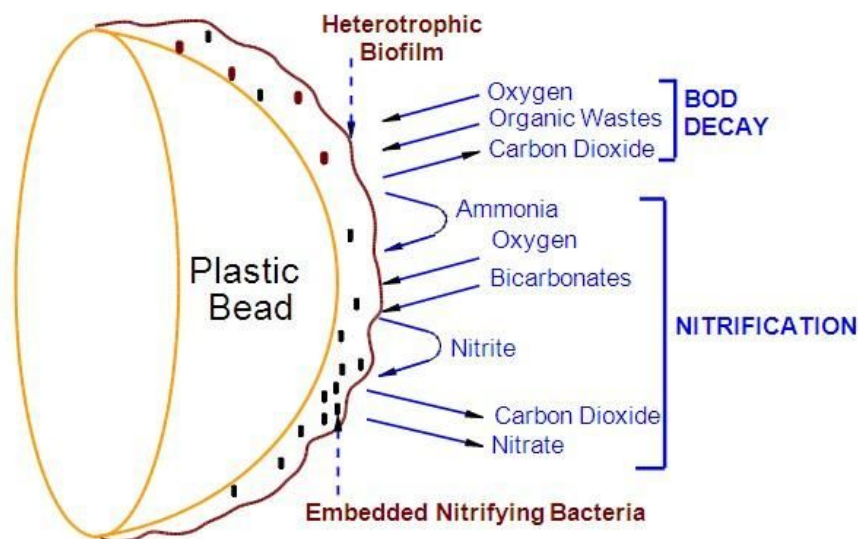


Figure 2. The bacterial film that coats each bead contains the nitrifying bacterial population. Heterotrophic bacteria also form a thin biofilm layer on each bead. The nitrifying bacteria compete with the heterotrophic bacteria for space.

Table 2. In the Biofiltration Mode, Bead Filters Cultivate Two Types of Bacteria which Perform the Critical Biofiltration Function.

	Heterotrophic Bacteria	Nitrifying
Function	Remove dissolved organics (BOD) from the water column; breakdown and decay organic sludges.	Convert toxic ammonia and nitrite (toxic) to nitrate (non-toxic).
Reproduction Rate	Very fast (10 – 15 minutes)	Slow (12 – 36 hours)
Yield (mg bacteria/mg waste consumed)	0.6 – 0.8	0.05 – 0.10
Bead adhesion	Poor	Good

The classification of heterotrophic bacteria encompasses a great number of genera/species that share the common characteristics of extracting their nourishment from the breakdown (decay) of organic matter. Biochemical oxygen demand (BOD) is largely an indirect measure of the biodegradable organic material in water. Heterotrophic bacteria reduce BOD levels, consuming oxygen in the process. About 60 percent of the organic matter consumed is converted to bacterial biomass; whereas, the balance (40 percent) is converted to carbon dioxide, water, or ammonia. Heterotrophic bacteria grow very fast, capable of doubling their population every ten to fifteen minutes. If the BOD in the water being treated is very high (> 20 mg -O₂/l), the heterotrophs will quickly dominate the bead bed, overgrowing the slower growing nitrifying bacteria and consuming tremendous amounts of oxygen.

The second, yet more important, classification of bacteria is the nitrifying bacteria. These bacteria are specialists, extracting energy for growth from the chemical conversion of ammonia to nitrite and from nitrite to nitrate (Figure 3). Nitrate is a stable end product which, although a valuable nutrient for plants, displays little of the toxic impacts of ammonia and nitrite. Composed principally of two genera (Nitrosomonas species and Nitrobacter species), nitrifying bacteria are very slow growing and sensitive to a wide variety of water quality factors. It is not surprising that most bead filters used for biofiltration are managed to optimize conditions for nitrification.

LIMITED WARRANTY

AST offers a one-year warranty from the date of product shipment on all filters that we manufacture. AST does not warrant refurbished filters. AST is not liable for damage during shipping. Customers are responsible for assessing any damages prior to accepting a shipment. Damages during shipping should be taken up with shipping companies.

AST does NOT warrant pumps, UV sterilizers, protein skimmers, or other accessory items; please refer to the manufacturer's warranty. AST filters are manufactured in the United States. Filters are assembled and tested for quality control at AST to ensure that you have the best product we can provide. Extended warranties are available for purchase ONLY at the time of the original filter purchase, at 10% of the filter cost for an extension of 12 months on the original warranty (covers repairs and replacement parts; does NOT cover travel costs). *AST is not under obligation to extend warranties for improper operation or neglect of filters.*

AST warrants our products and workmanship to be free of defects under proper operation and regular servicing on AST Bubble Bead, Propeller Bead, Endurance, High Profile, Low Profile, and standard Polygeyser filters for a period of one (1) year from the date of shipment. All warranty claims must be presented in writing to AST. Proper operation and service requires:

1. The filter is installed and operated according to the installation and operational instructions supplied by the manufacturer.
2. That excessive weight due to heavy pipes, valves, etc. should not be carried by the inlets or outlets.
3. That the filter is not operated above the maximum hull pressure rating as specified ON THE FILTER.

This warranty is a ONE-time warranty within the stated time constraint and does not include cash refunds. The warranty is good only when total payment for the equipment has been received. The limited warranty during the warranty period shall consist of *repair OR replacement* of the items of product, at the discretion of AST. The warranty only applies to the original purchaser.

The warranty is no longer valid if the items are damaged due to negligence or accident after purchase; used for other than the intended purpose; altered from the original construction; repaired by an entity other than AST; or operated with products that affect the integrity, performance, or safety of AST's products. AST is not liable for indirect or consequential cost, including materials lost, labor or installation/reinstallation cost, injury, property damage, or damage caused by mishandling. Returns for repairs must be pre-approved and return shipping paid for by the purchaser with the return authorization number displayed on the outside of the shipping container.

You MUST contact AST for approval of repairs BEFORE sending a filter back. Products returned for repair that are not manufactured by AST will incur additional labor and repair costs, as determined by the repairs or replacements required. Returns will not be accepted without a "return authorization number."

Returns for repair should be sent to the following address "FREIGHT PREPAID":

Aquaculture Systems Technologies, LLC
2120 North 3rd Street
Baton Rouge, LA 70802

Manufacturer's liability for incidental or consequential damages is specifically excluded to the full extent permitted by the applicable law. This warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state.

THIS WARRANTY IS EXCLUSIVE OF ALL OTHER IMPLIED WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.